CATALOG OF REPLACEMENT PARTS

C24GA6 & C24GA10 GAS CONVECTION STEAMERS

C24GA6	*ML-136056*
C24GA10	*ML-136057*

PRIOR MLS COVERED IN THIS MANUAL

C24GA6	*ML-136021*
C24GA10	*ML-136022*




For additional information on Vulcan-Hart or to locate an authorized parts and service provider in your area, visit our website at www.vulcanhart.com.

VULCAN-HART
DIVISION OF ITW FOOD EQUIPMENT GROUP, LLC
WWW.VULCANHART.COM

3600 NORTH POINT BLVD.
BALTIMORE, MD 21222

FORM 35424 Rev. A (March 2007)


TABLE OF CONTENTS

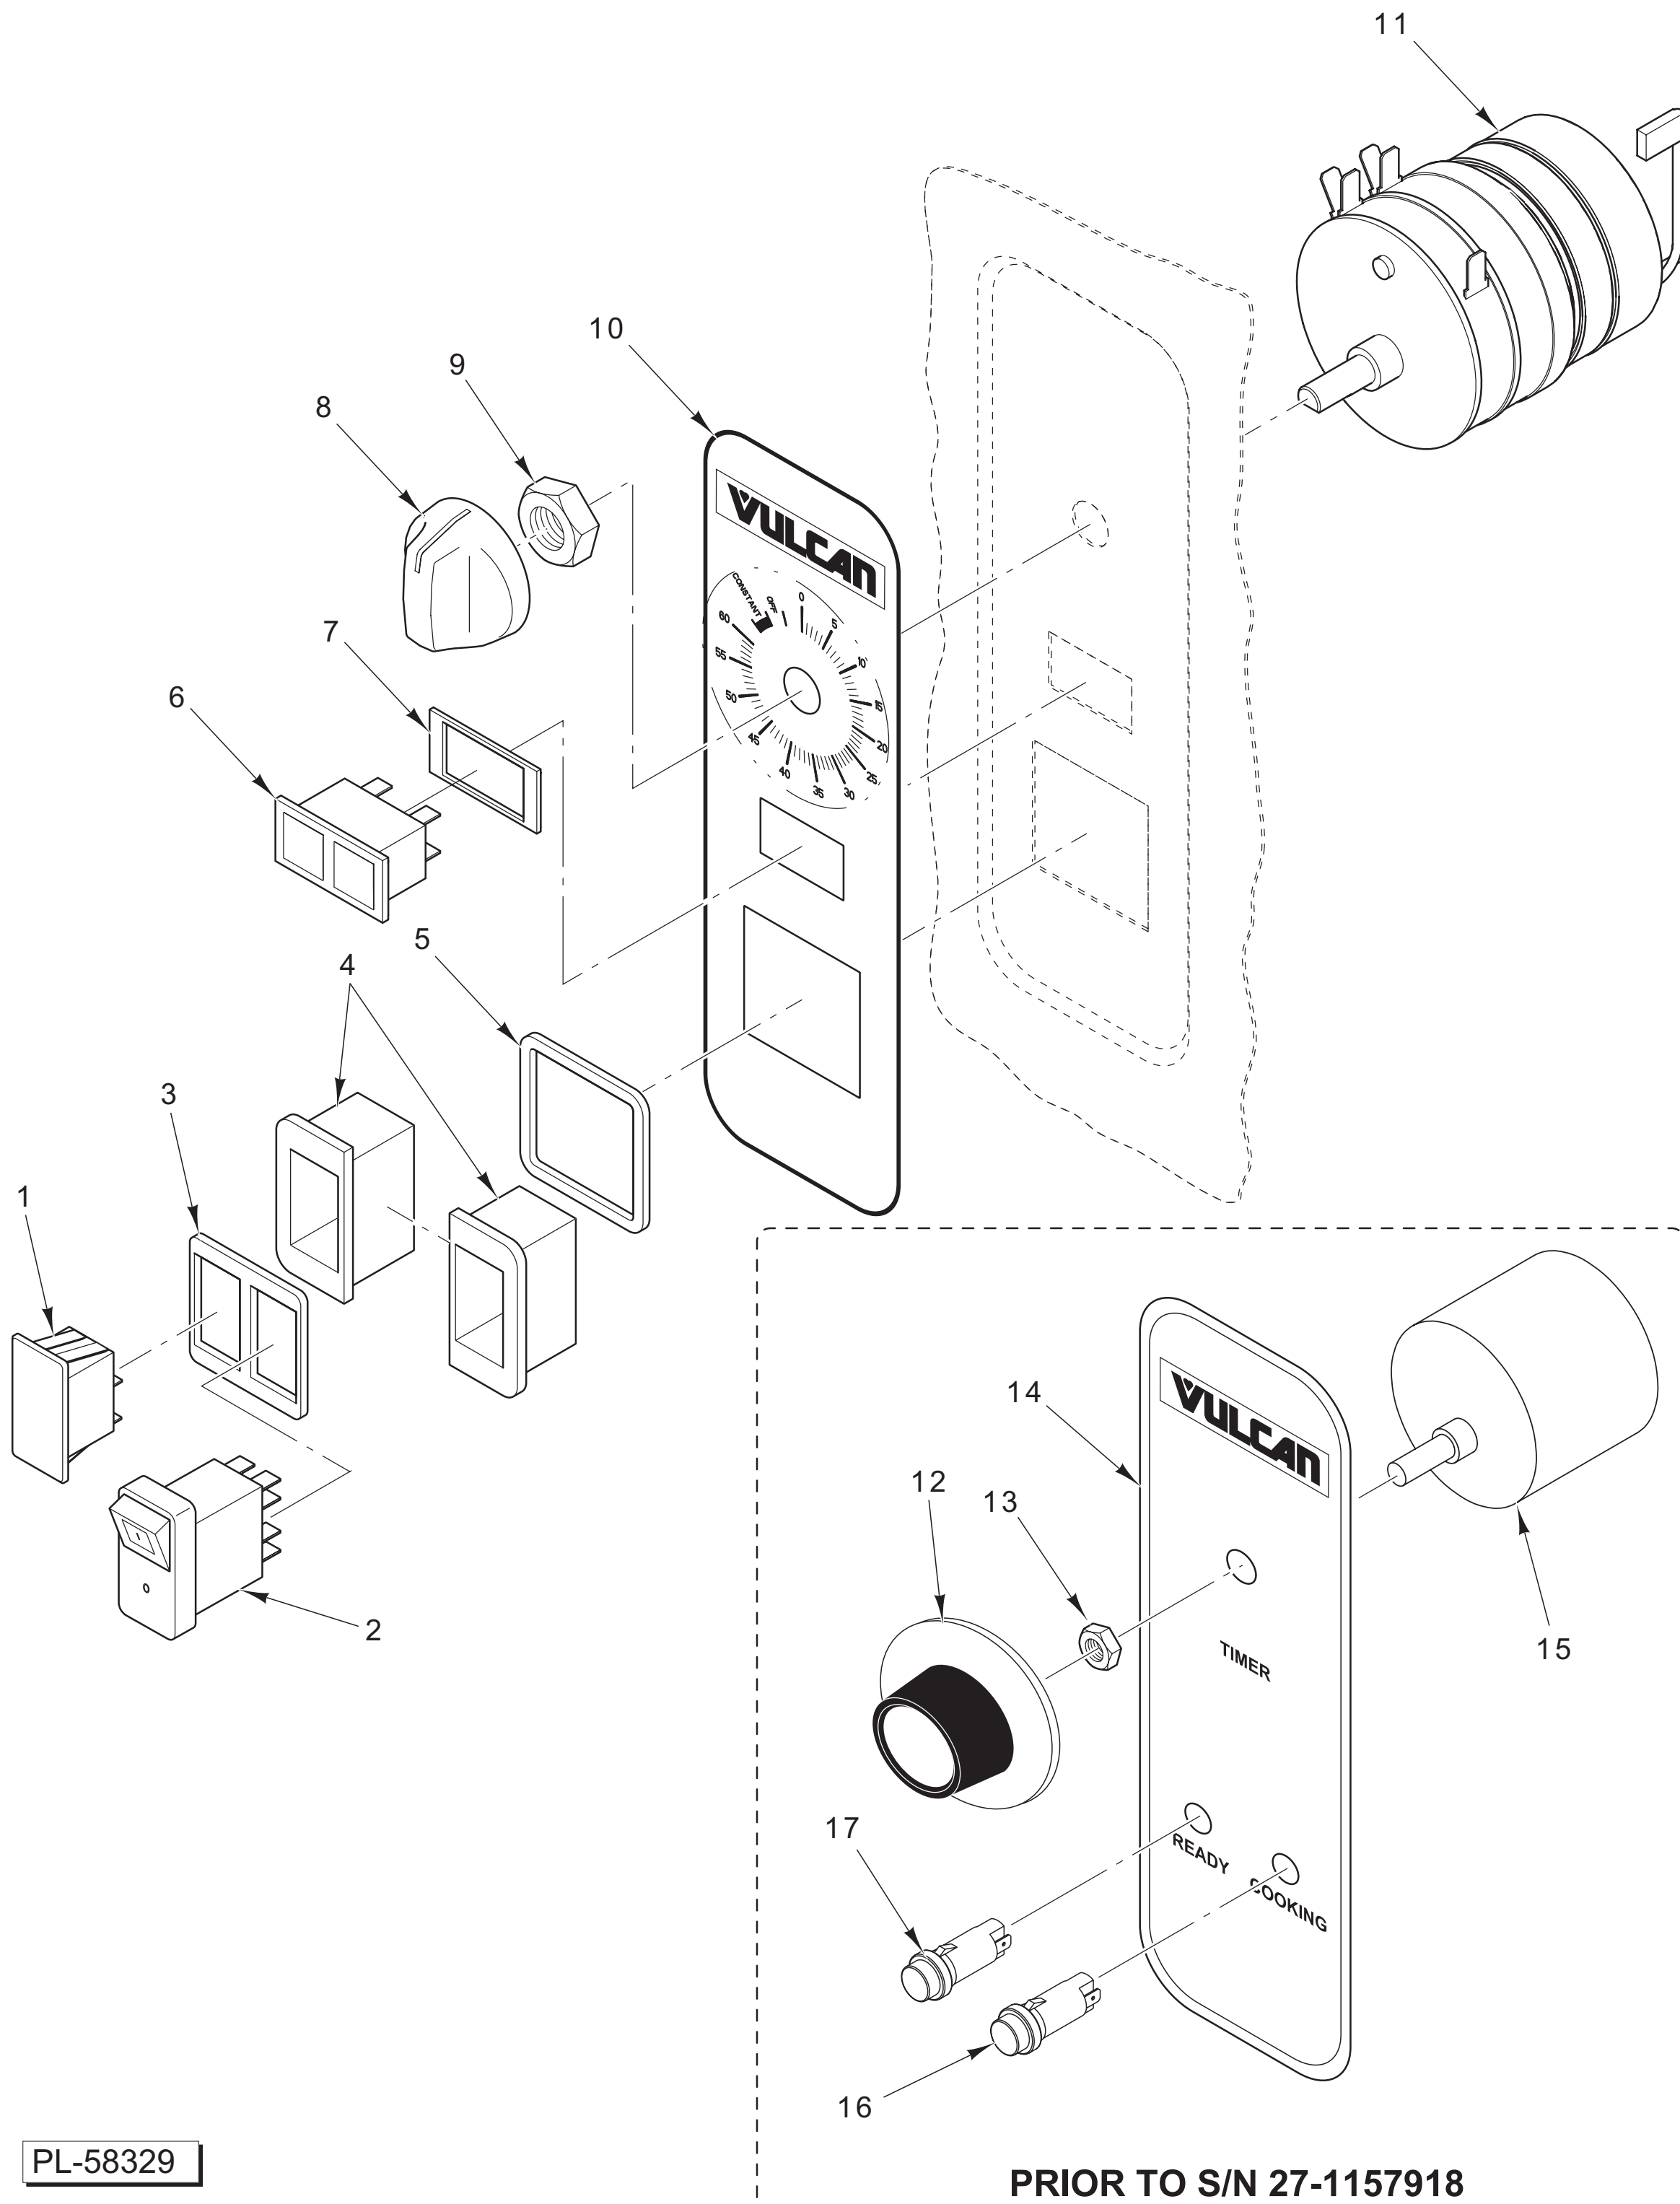
11
10
9
8
7
6
5
4
3
1
2
VULCAN
14
12
13
TIMER
15
17
READY
COOKING
16
PL-58329
PRIOR TO S/N 27-1157918

CONTROLS

CONTROLS


ILLUS. PL-58329	PART NO.	NAME OF PART	AMT.
1	00-854330-00001	Plug – Switch Hole	1
2	00-855677-00001	Switch – On/Off (Lighted)	1
3	00-855795-00001	Gasket – Switch	1
4	00-855794-00001	Bezel – Switch	2
5	00-855796-00001	Gasket – Bezel	1
6	00-855695-00001	Light – Indicating (125 VAC)	1
7	00-856678-00001	Gasket – Indicator Light	1
8	00-856773-00001	Knob – Timer	1
9	00-854693-00001	Shaft – Rotary Seal	1
10	00-856771-00002	Overlay – Control	1
11	00-856621-00001	Timer – Mechanical	1
12	00-843781-00003	Knob – Timer (Previous Construction)	1
13	00-854693-00001	Shaft – Rotary Seal (Previous Construction)	1
14	00-855354-00004	Overlay – Control (Previous Construction)	1
15	00-411690-00002	Timer (60 Min.) (Previous Construction)	1
16	00-844367-00055	Light – Pilot Red (120 V.) (Previous Construction)	1
17	00-840507	Light – Pilot Green (120 V.) (Previous Construction)	1
	00-856679-00001	Light Assy. – Indicating (Incls. Items 6 & 7)	1

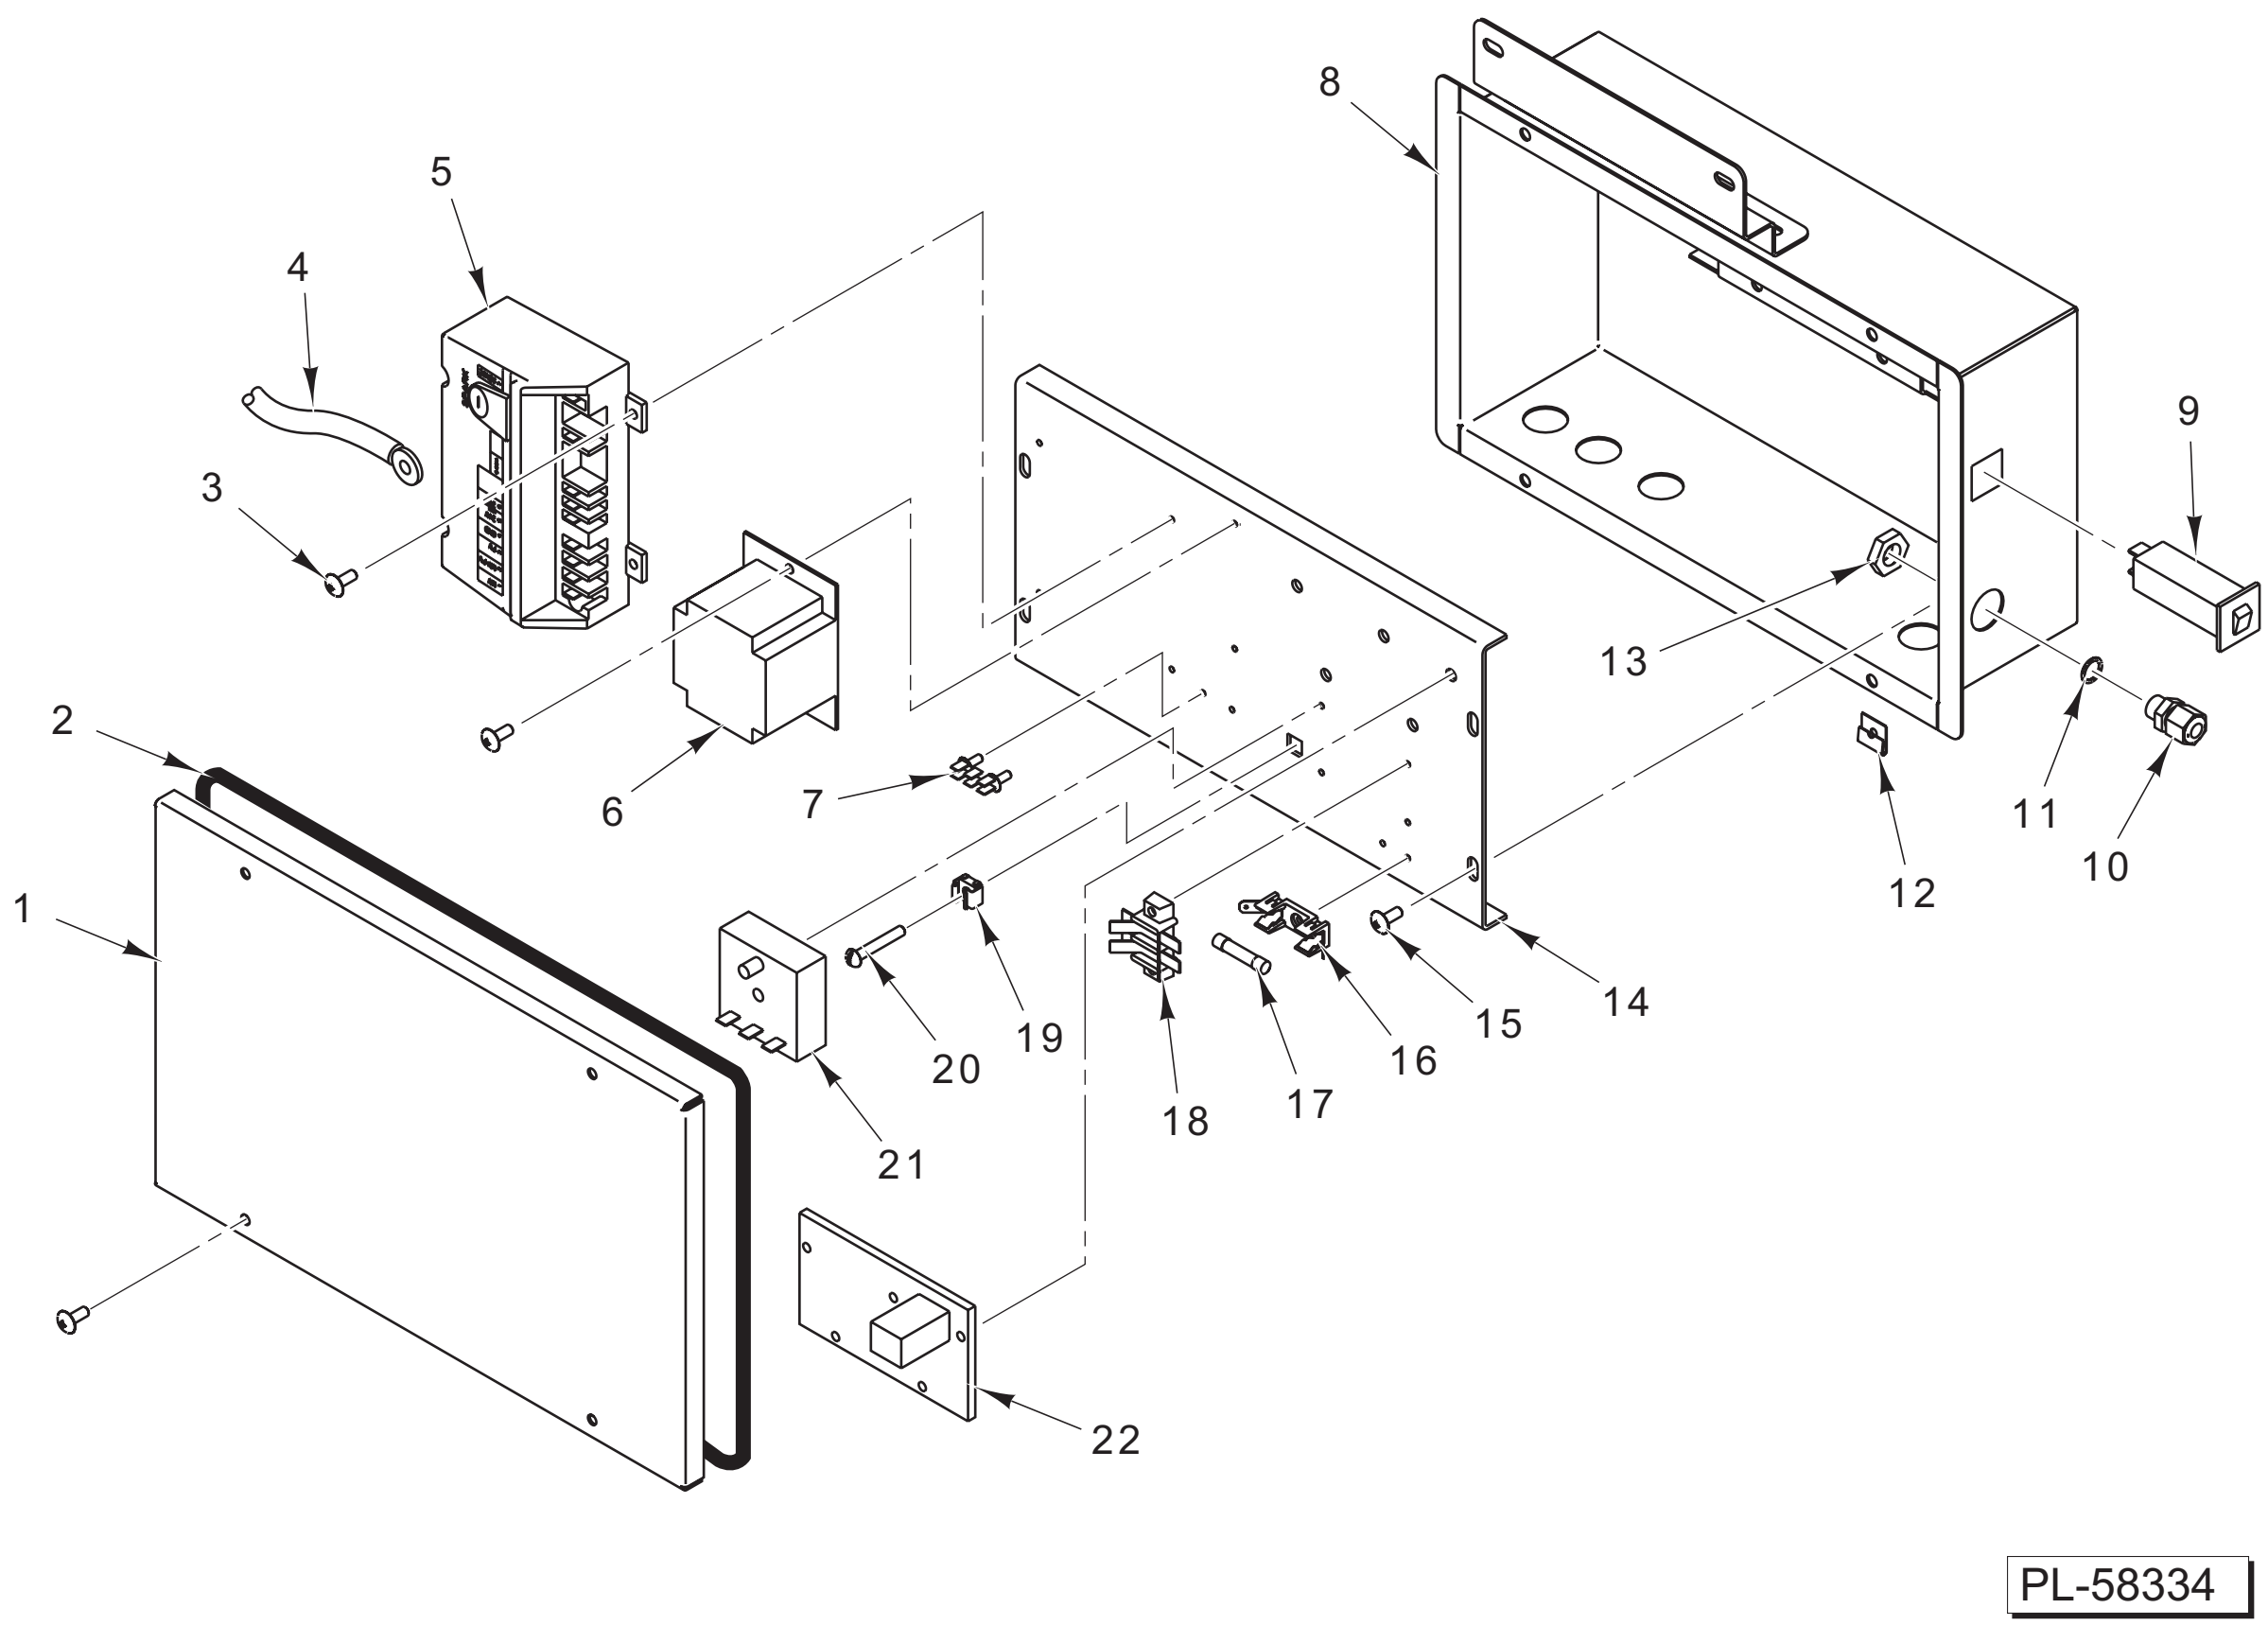

ELECTRICAL COMPONENTS

ELECTRICAL COMPONENTS


ILLUS. PL-58334	PART NO.	NAME OF PART	AMT.
1	00-855655-00001	Lid – Control Box	1
2	00-854664-00001	Gasket	1
3	SD-019-29	Self-Tapping Screw 6-20 x 1/2 Phil. Pan Hd. Type B	10
4	00-857210-00005	Ignition Cable	1
5	00-857207-00002	Module – Ignition (Incls. Item 4)	1
6	00-411500-00012	Transformer (120 V.)	1
7	00-419317	Terminal – Stationary Male	1
8	00-855651-00001	Box – Control	1
9	00-423987-00001	Circuit Breaker (3 Amp.) (Machines Built Prior To 3/21/06)	1
10	00-854761-00002	Relief – Strain 1/2 NPT Liquid Tight	3
11	00-854763-00002	O-Ring	3
12	00-854766-00001	Speed Nut (J-Type)	8
13	00-854762-00002	Lock Nut 1/2 NPT	3
14	00-855656-00001	Plate – Component	1
15	SC-066-06	Mach. Screw 10-24 x 1/2 Phil. Truss Hd. (SST)	8
16	00-856677-00001	Block – Fuse (300 V., 20 Amp.)	1
17	FE-024-94	Fuse (250 V., 4 Amp.)	1
18	00-854707-00002	Terminal – Block (2 Pole)	1
19	NS-049-01	Nut – Panel 10-24	1
20	SC-021-96	Mach. Screw 10-24 x 1 1/4 Slotted Rd. Hd.	1
21	00-855661-00001	Relay – Time Delay	1
22	00-844069-00001	Control – Low Water	1
	00-855650-00001	Box – Power (Incls. Items 1 thru 8 & 10 thru 22)	1
	00-419315	Cord – Power	1

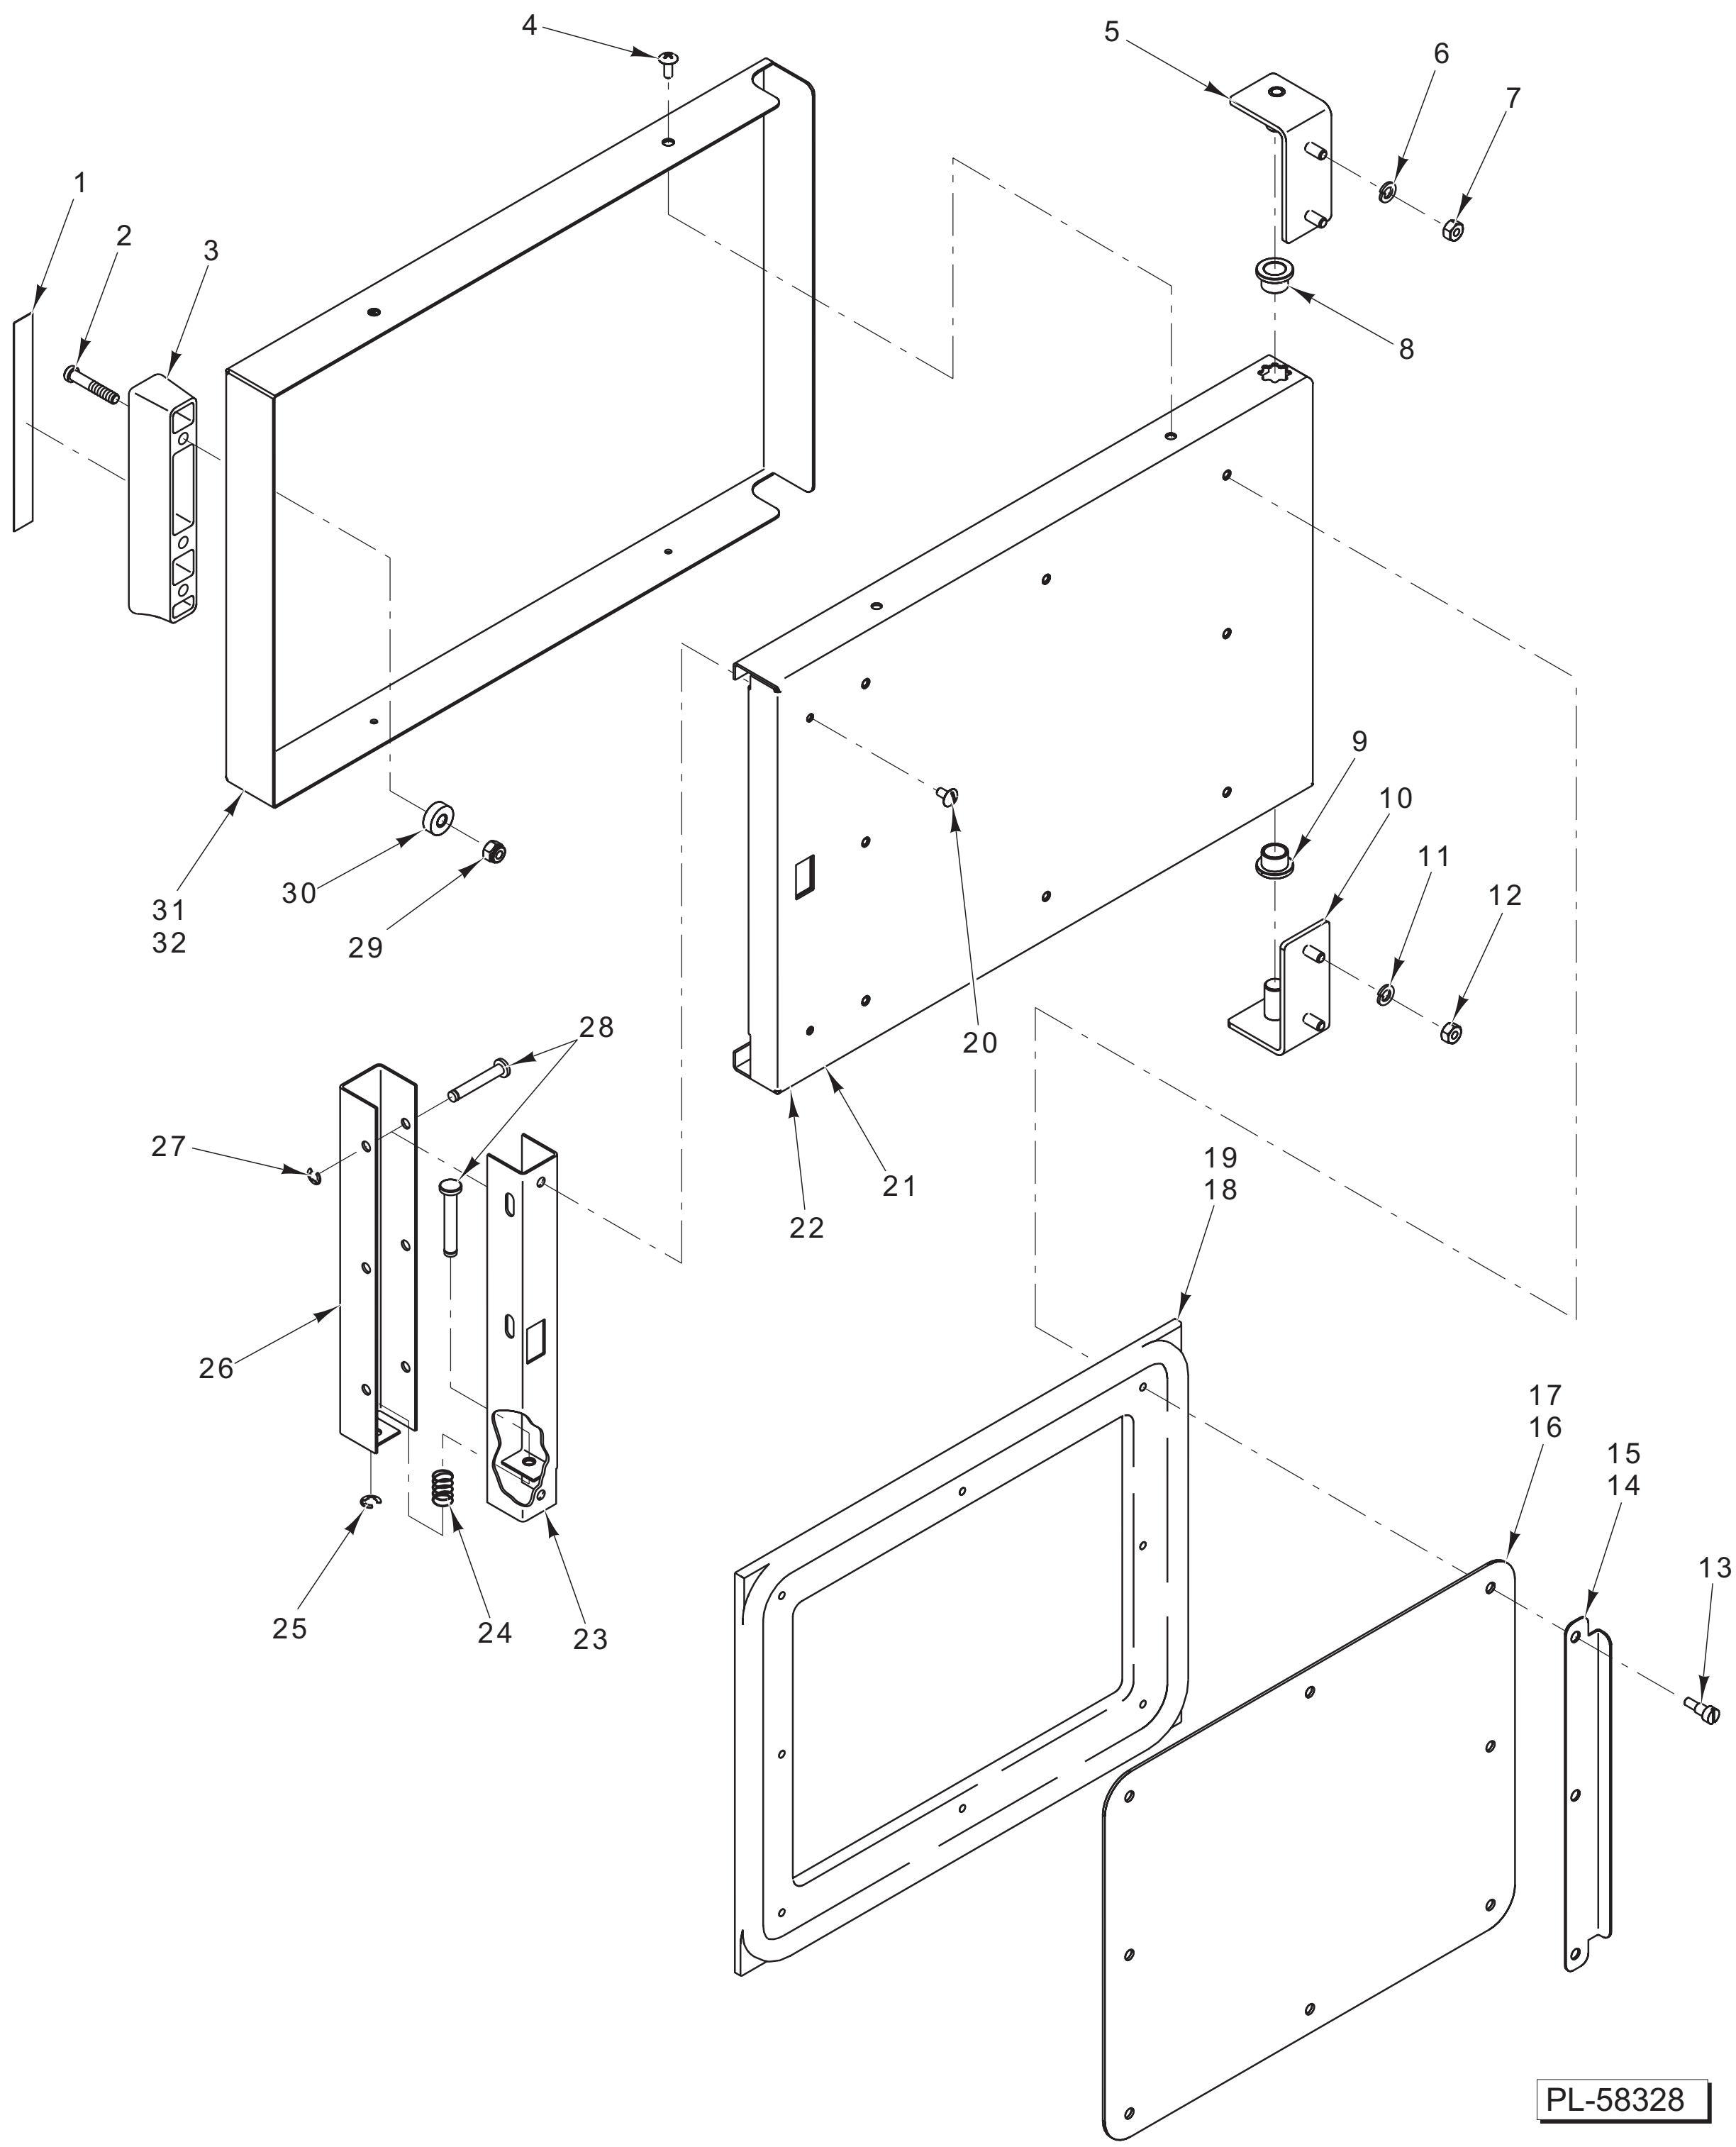
1
2
3
4
5
6
7
8
9
10
11
12
13
15
14
17
16
19
18
20
21
22
23
24
25
26
27
28
29
30
31
32
PL-58328

DOOR

DOOR


ILLUS. PL-58328	PART NO.	NAME OF PART	AMT.
1	00-855288-00001	Face Plate – Door Handle	1
2	SC-120-70	Cap Screw $^1/_4$-20 x 1$^5/_8$ Hex Socket Hd.	2
3	00-855287-00001	Door – Handle	1
4	SC-066-20	Mach. Screw 10-32 x $^1/_2$ Phil. Pan Hd.	4
5	00-855521-00001	Hinge Assy. – Door (Top)	1
6	WL-006-17	Lockwasher $^1/_4$ Helical	2
7	NS-046-38	Nut $^1/_4$-20 Hex (SST)	2
8	00-817643	Bearing – Flanged	1
9	00-817643	Bearing – Flanged	1
10	00-855521-00002	Hinge Assy. – Door (Bottom)	1
11	WL-006-17	Lockwasher $^1/_4$ Helical	2
12	NS-046-38	Nut $^1/_4$-20 Hex (SST)	2
13	00-855597-00002	Screw – Shoulder Slotted	3
14	00-855714-00001	Gasket – Door Guard (3-Pan)	1
15	00-855714-00002	Gasket – Door Guard (5-Pan)	1
16	00-855285-00001	Gasket Retainer – Door (3-Pan)	1
17	00-855285-00002	Gasket Retainer – Door (5-Pan)	1
18	00-855286-00001	Gasket – Cabinet Door (3-Pan) (Incls. Shim Kit)	1
19	00-855286-00002	Gasket – Cabinet Door (5-Pan) (Incls. Shim Kit)	1
20	SC-053-05	Mach. Screw 10-24 x $^3/_8$ Slotted Truss Hd.	2
21	00-855582-00001	Bracket Weldment – Door (3-Pan)	1
22	00-855582-00002	Bracket Weldment – Door (5-Pan)	1
23	00-855584-0001	Door Latch – Bracket	1
24	00-855298-00001	Latch Spring – Door	1
25	RR-006-22	Ring – Retaining ($^1/_4$ In.)	1
26	00-855585-00001	Latch Actuator – Door	1
27	RR-006-22	Ring – Retaining ($^1/_4$ In.)	3
28	00-855590-00002	Pin – Clevis 1.525 In. Lg.	4
29	NS-048-63	Stop Nut $^1/_4$-20 Special	2
30	00-855290-00001	Bearing – Door Handle	2
31	00-855580-00001	Frame – Door (3-Pan)	1
32	00-855580-00002	Frame – Door (5-Pan)	1

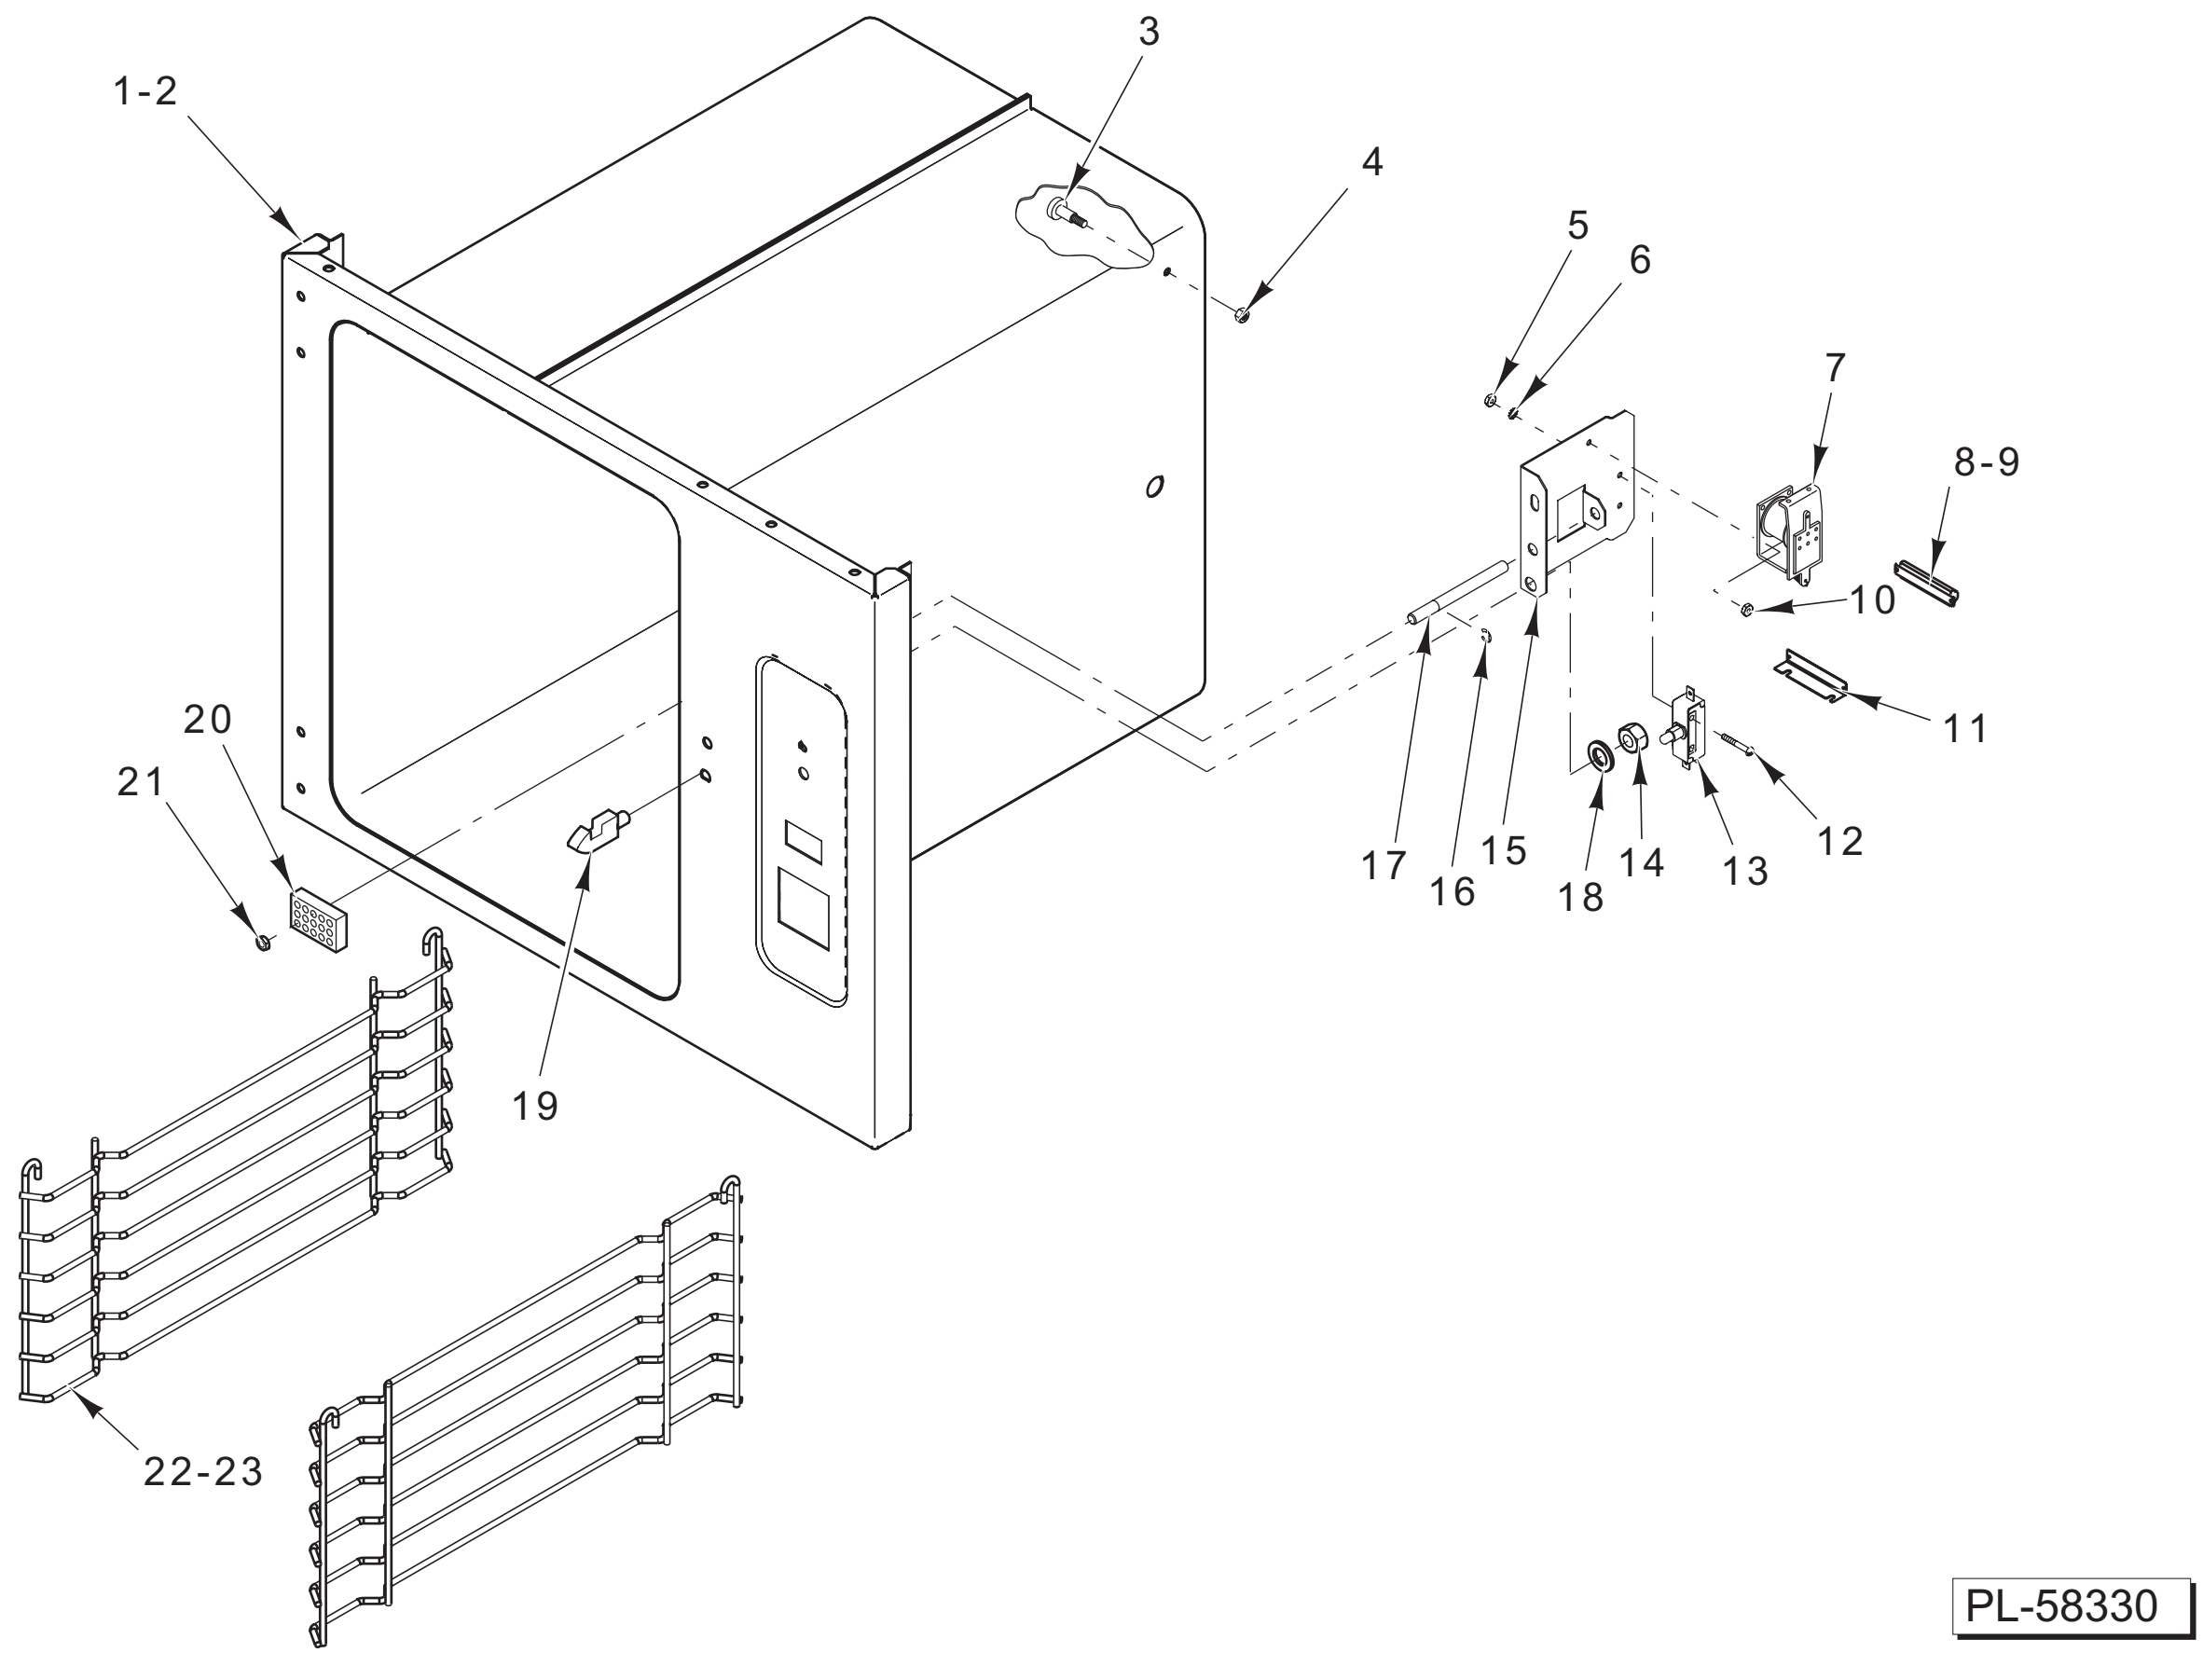

COMPARTMENT

COMPARTMENT


ILLUS. PL-58330	PART NO.	NAME OF PART	AMT.
1	00-855278-00001	Compartment (3-Pan)	1
2	00-855449-00001	Compartment (5-Pan)	1
3	00-855337-00001	Shoulder Screw 18-8 Slotted	4
4	NS-049-09	Nut Assy. 10-32 Hex (SST)	4
5	SC-021-08	Mach. Screw 6-32 x $^3/_8$ Slotted Rd. Hd.	1
6	WL-003-09	Lockwasher #6 Helical	1
7	00-411499-00004	Buzzer (115 V.)	1
8	00-851530-00004	Block – Terminal (10-Position)	1
9	NS-046-89	Nut Assy. 6-32	2
10	NS-011-07	Nut 6-32 Hex (SST)	2
11	00-855438-00001	Bracket – Terminal Block	1
12	SC-021-12	Mach. Screw 6-32 x 1 Slotted Rd. Hd.	1
13	00-842049	Switch – Door	1
14	NS-015-13	Nut $^3/_8$-16 Hex (SST)	1
15	00-855308-00001	Actuator Bracket – Door	1
16	RR-006-22	Ring – Retaining	2
17	00-855307-00001	Actuator Rod – Door	1
18	WL-006-27	Lockwasher $^3/_8$ Helical	1
19	00-855586-00001	Bullet – Door	1
20	00-855753-00001	Cover – Drain	1
21	NS-011-18	Nut 10-24 Hex (SST)	1
22	00-855355-00001	Rack – Wire (3-Pan)	2
23	00-855355-00002	Rack – Wire (5-Pan)	2
	00-855779-00001	Compartment – Insulation (3-Pan)	1
	00-855779-00002	Compartment – Insulation (5-Pan)	1

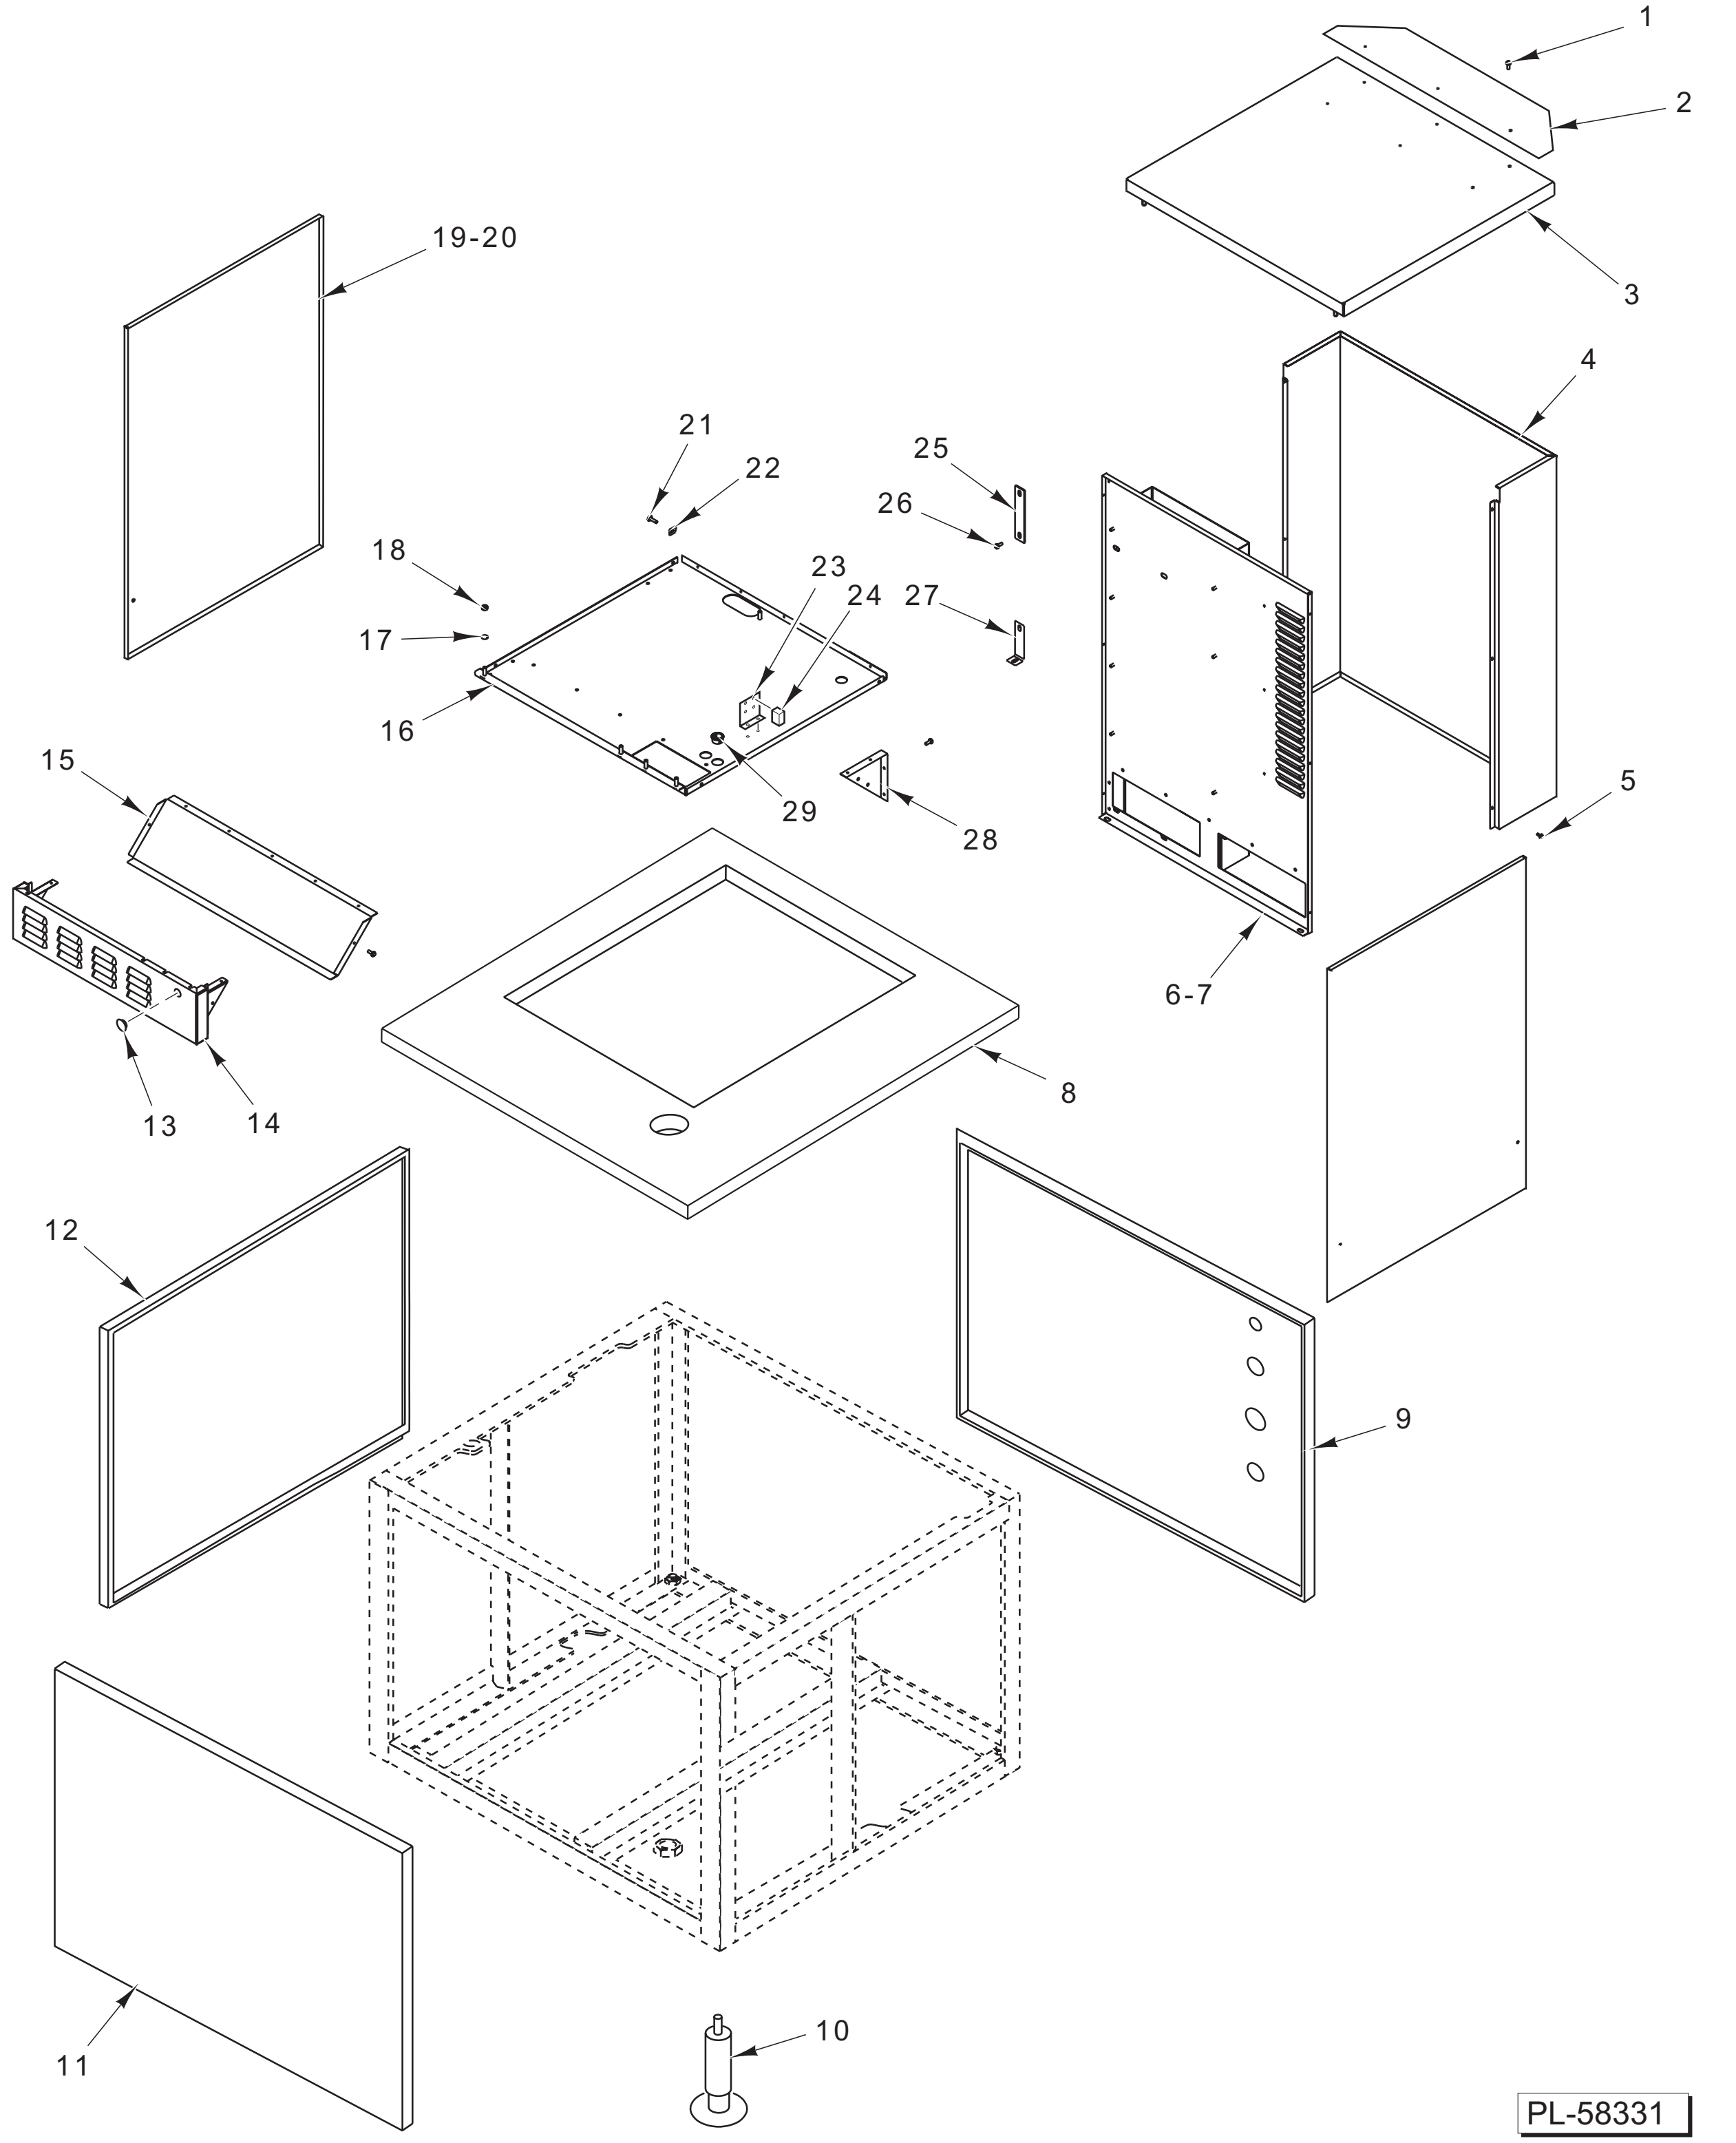
1
2
3
4
5
6-7
8
9
10
11
12
13
14
15
16
17
18
19-20
21
22
23
24
25
26
27
28
29
PL-58331

PANELS

PANELS


ILLUS. PL-58331	PART NO.	NAME OF PART	AMT.
1	SD-036-58	Self-Tapping Screw 10-16 x 1/2 Hex Washer Hd., Type AB	32
2	00-856688-00001	Guard – Flue	1
3	00-855547-00001	Panel – Cabinet Top	1
4	00-855318-00001	Panel – Cabinet Flue Cover	1
5	SD-036-03	Self-Tapping Screw 8-18 x 3/8 Hex Washer Hd., Type AB	6
6	00-855317-00001	Panel – Cabinet Back (6-Pan)	1
7	00-855461-00001	Panel – Cabinet Back (10-Pan)	1
8	00-855689-00001	Tabletop	1
9	00-855663-00001	Panel – Rear Assy.	1
10	00-881526	Foot – Leg & Flange	1
11	00-855663-00002	Panel – Front	1
12	00-855672-00001	Panel – Side	1
13	PB-004-38	Plug – Button	1
14	00-855316-00001	Apron – Cabinet	1
15	00-855435-00001	Panel – Cabinet Flue Base	1
16	00-855331-00001	Panel – Cabinet Base	1
17	WL-006-17	Lockwasher 1/4 Helical	14
18	NS-046-38	Nut 1/4-20 Hex	7
19	00-855321-00001	Side Panel – Cabinet (6-Pan)	2
20	00-855321-00002	Side Panel – Cabinet (10-Pan)	2
21	SC-053-03	Mach. Screw 10-24 x 3/4 Slotted Truss Hd. (SST)	4
22	NS-046-38	Nut 1/4-20 Hex	7
23	00-855675-00001	Bracket – Relay	1
24	00-416535-00006	Switch – Relay (120 V.)	2
25	00-855326-00001	Bracket – Cabinet Compartment Middle	1
26	SD-036-58	Self-Tapping Screw 10-16 x 1/2 Hex Washer Hd., Type AB	8
27	00-855327-00001	Bracket – Cabinet Compartment Support	1
28	00-855315-00001	Bracket – Cabinet Apron	2
29	FE-016-02	Bushing – Electric Snap	2
	SC-041-01	Cap Screw 1/4-20 x 3/4 Hex Hd. (SST)	2
	WS-017-06	Washer (SST)	2
	NS-048-63	Lock Nut 1/4-20 Nylock (SST)	2

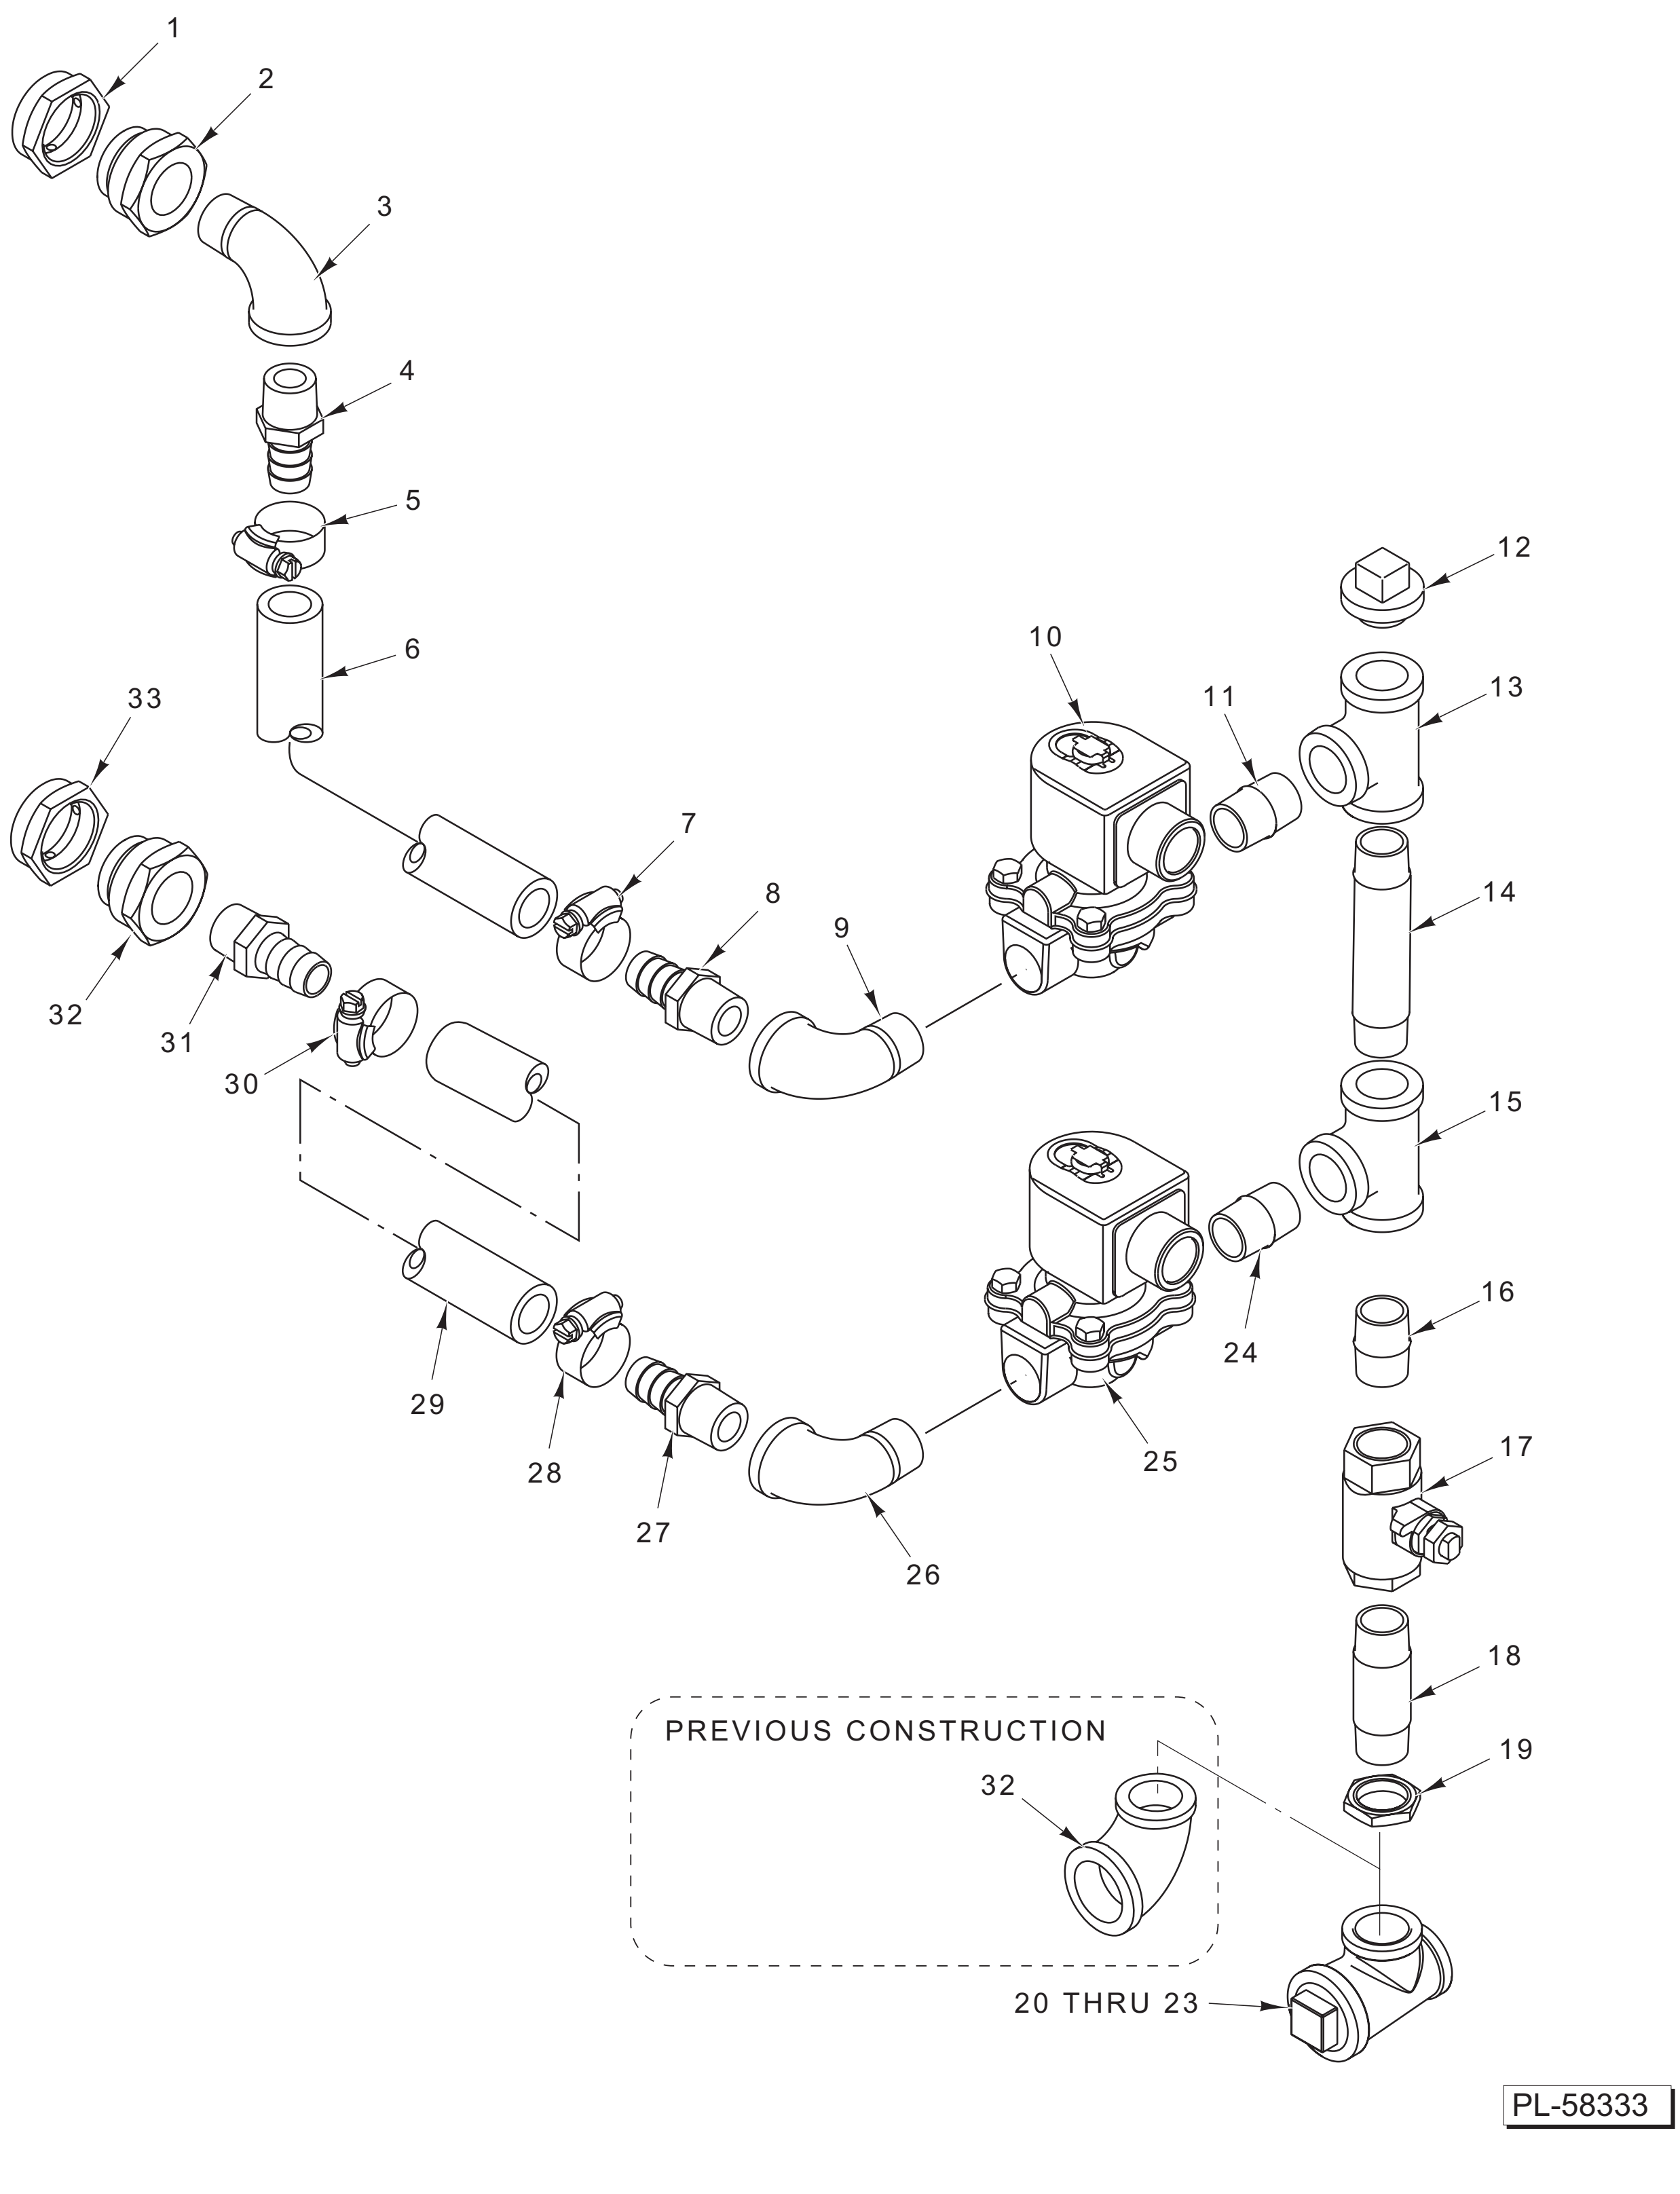
1
2
3
4
5
6
7
8
9
10
11
12
13
14
15
16
17
18
19
20 THRU 23
24
25
26
27
28
29
30
31
32
33
PREVIOUS CONSTRUCTION
32
PL-58333

PLUMBING

PLUMBING


ILLUS. PL-58333	PART NO.	NAME OF PART	AMT.
1	00-855393-00001	Head – Steamport Cabinet	1
2	00-855394-00001	Adapter – Steamport Cabinet	1
3	FP-015-17	Elbow – Pipe 1/2 x 90 Deg. (Brass)	1
4	FP-090-83	Fitting – Hose 3/4 to 1/2 (Brass)	1
5	00-557579	Clamp – Hose	1
6	00-557792	Steam Line – Upper (3/4 In. I.D. High Temperature)	18 In.
7	00-557579	Clamp – Hose	1
8	FP-090-83	Fitting – Hose 3/4 to 1/2 (Brass)	1
9	FP-015-17	Elbow – Pipe 1/2 x 90 Deg. (Brass)	1
10	00-855395-00001	Valve 1/2 NPT	1
11	FP-054-08	Pipe 1/2 x 1 1/4 TBE (SST)	1
12	FP-028-15	Pipe Plug 1/2 Sq. Hd. (Brass)	1
13	FP-019-21	Tee – Pipe 1/2 x 1/2 x 1/2 (Brass)	1
14	FP-040-62	Pipe 1/2 x 3 TBE (Brass)	1
15	FP-019-21	Tee – Pipe 1/2 x 1/2 x 1/2 (Brass)	1
16	FP-054-08	Pipe 1/2 x 1 1/4 TBE (SST)	1
17	00-881161	Valve – Ball	1
18	FP-054-39	Pipe 1/2 x 2 1/2 TBE (SST)	1
19	FP-053-05	Lock Nut 1/2 (SST)	1
20	FP-27-22	Bushing – Pipe 3/4 to 1/2 (Brass)	1
21	FP-019-40	Tee – Pipe 1 x 3/4 x 3/4 (Brass)	1
22	FP-028-22	Pipe Plug 1 In. (Brass)	1
23	00-855676-00001	Screen – Strainer	1
24	FP-054-08	Pipe 1/2 x 1 1/4 TBE (SST)	1
25	00-855395-00001	Valve 1/2 NPT	1
26	FP-015-17	Elbow – Pipe 1/2 x 90 Deg. (Brass)	1
27	FP-090-83	Fitting – Hose 3/4 to 1/2 (Brass)	1
28	00-557579	Clamp – Hose	1
29	00-557792	Steam Line – Lower (3/4 In. I.D. High Temperature)	12 In.
30	00-557579	Clamp – Hose	1
31	FP-090-83	Fitting – Hose 3/4 to 1/2 (Brass)	1
32	00-855394-00001	Adapter – Steamport Cabinet	1
33	00-855393-00001	Head – Steamport Cabinet	1

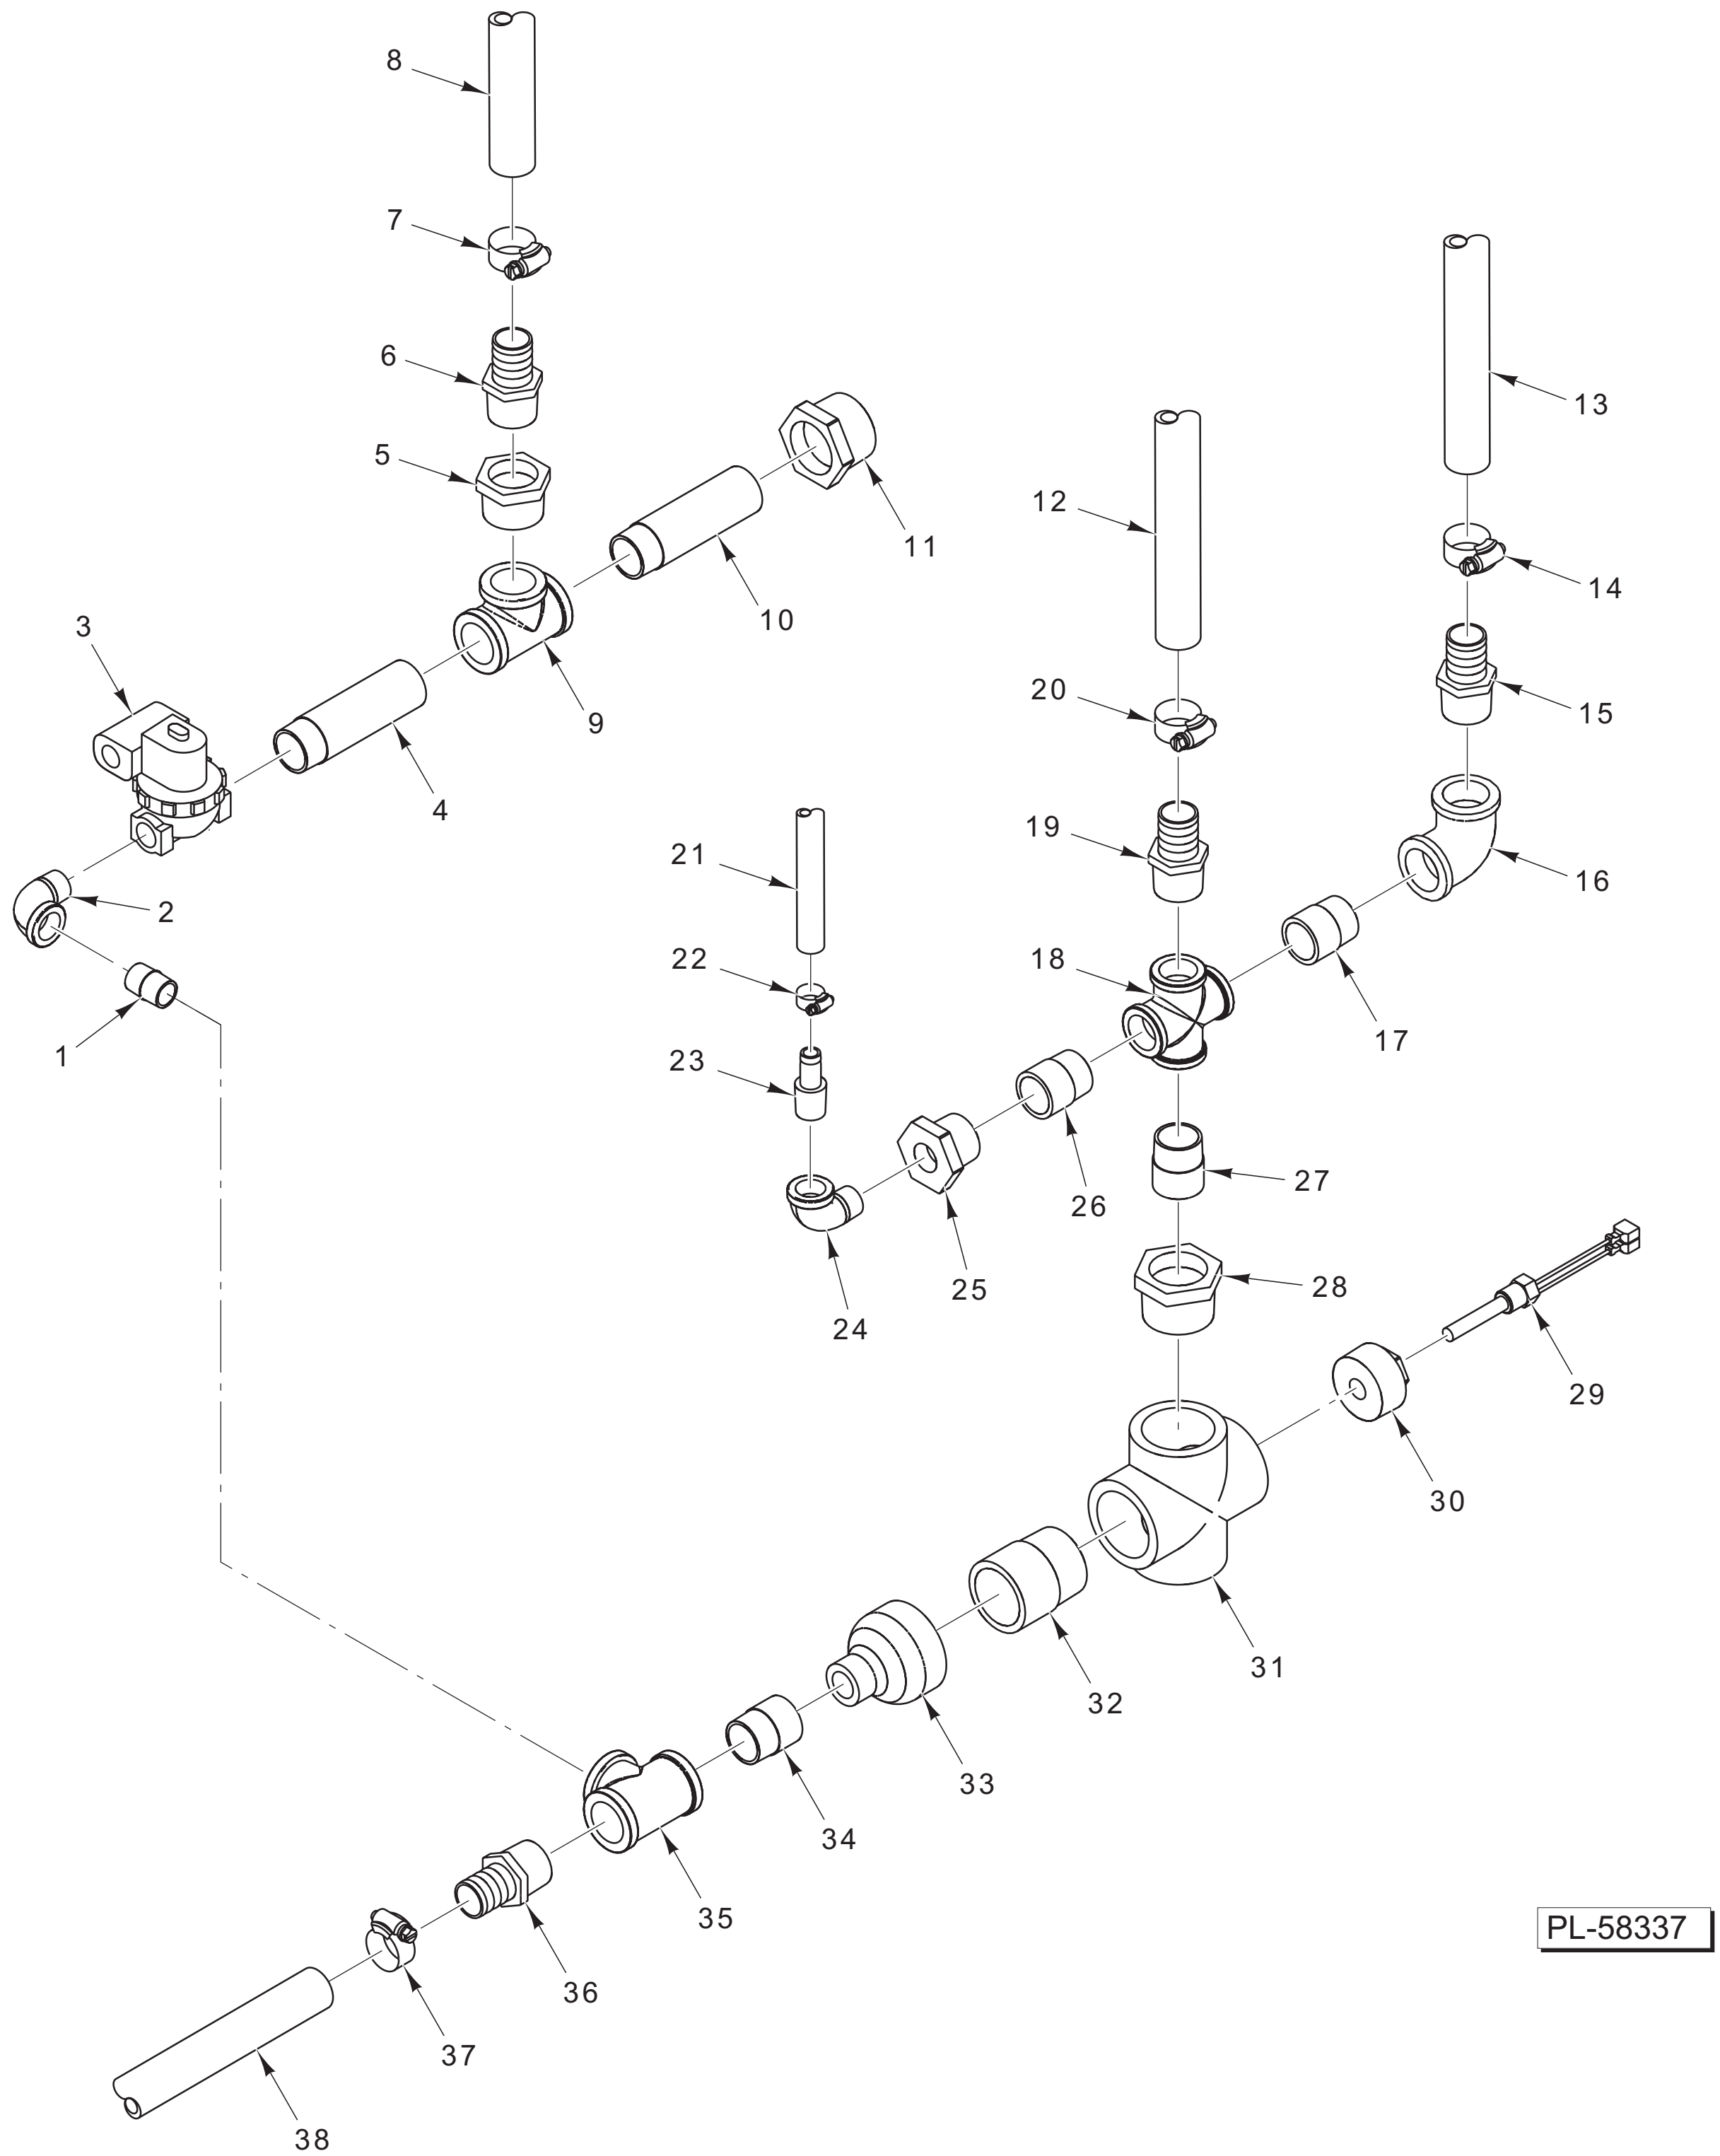

DRAIN ASSEMBLY (PREVIOUS CONSTRUCTION)

DRAIN ASSEMBLY (PREVIOUS CONSTRUCTION)


ILLUS. PL-58337	PART NO.	NAME OF PART	AMT.
1	FP-035-91	Pipe 1/2 x 1 1/4 TBE	1
2	FP-013-17	Elbow – Pipe 1/2 x 90 Deg.	1
3	00-435968-00001	Valve – Solenoid (1/2 In.)	1
4	FP-040-62	Pipe 1/2 x 3 TBE (Brass)	1
5	FP-027-13	Bushing – Pipe 1/2 to 3/8 (Brass)	1
6	FP-090-29	Fitting – Hose 3/8 to 3/8	1
7	00-557597	Clamp – Hose	1
8	00-557599	Hose 3/8 (Clear)	AR
9	FP-019-21	Tee – Pipe 1/2 x 1/2 x 1/2	1
10	FP-040-62	Pipe 1/2 x 3 TBE (Brass)	1
11	FP-027-22	Bushing – Pipe 3/4 to 1/2 (Brass)	1
12	00-557477	Hose (1 In.) Green	AR
13	00-557477	Hose (1 In.) Green	1
14	00-557756	Clamp – Hose	1
15	FP-090-19	Fitting – Hose 1 In.	1
16	FP-013-27	Elbow – Pipe 1/2 x 90 Deg.	1
17	FP-036-17	Pipe 1 x 1 1/2 TBE	1
18	FP-088-56	Cross – Pipe STD 1 x 1 x 1 x 1	1
19	FP-090-19	Fitting – Hose 1 In.	1
20	00-557756	Clamp – Hose	1
21	00-557475	Hose 5/8 (Blue)	AR
22	00-557597	Clamp – Hose	1
23	FP-087-39	Fitting – Hose 5/8 to 1/2 (Brass)	1
24	FP-013-17	Elbow – Pipe 1/2 x 90 Deg.	1
25	FP-026-24	Bushing – Pipe 1 to 1/2	1
26	FP-036-37	Pipe 1 1/2 x 2 1/2 TBE	1
27	FP-036-17	Pipe 1 x 1 1/2 TBE	1
28	FP-026-68	Bushing – Pipe 1 1/2 to 1	1
29	00-855607-00001	Thermostat – Condenser (135 Deg. F.)	1
30	FP-090-38	Bushing – Pipe 1 1/2 to 3/8	1
31	FP-090-28	Cross – Pipe STD 1 1/2 x 1 1/2 x 1 1/2 x 1 1/2	1
32	FP-036-17	Pipe 1 x 1 1/2 TBE	1
33	FP-024-50	Coupling – Reducing 1 1/2 to 1/2	1
34	FP-035-94	Pipe 1/2 x 1 1/2 TBE	1
35	FP-019-21	Tee – Pipe 1/2 x 1/2 x 1/2	1
36	FP-090-29	Fitting – Hose 3/8 to 3/8	1
37	00-557597	Clamp – Hose	1
38	00-557599	Hose 3/8 (Clear)	AR

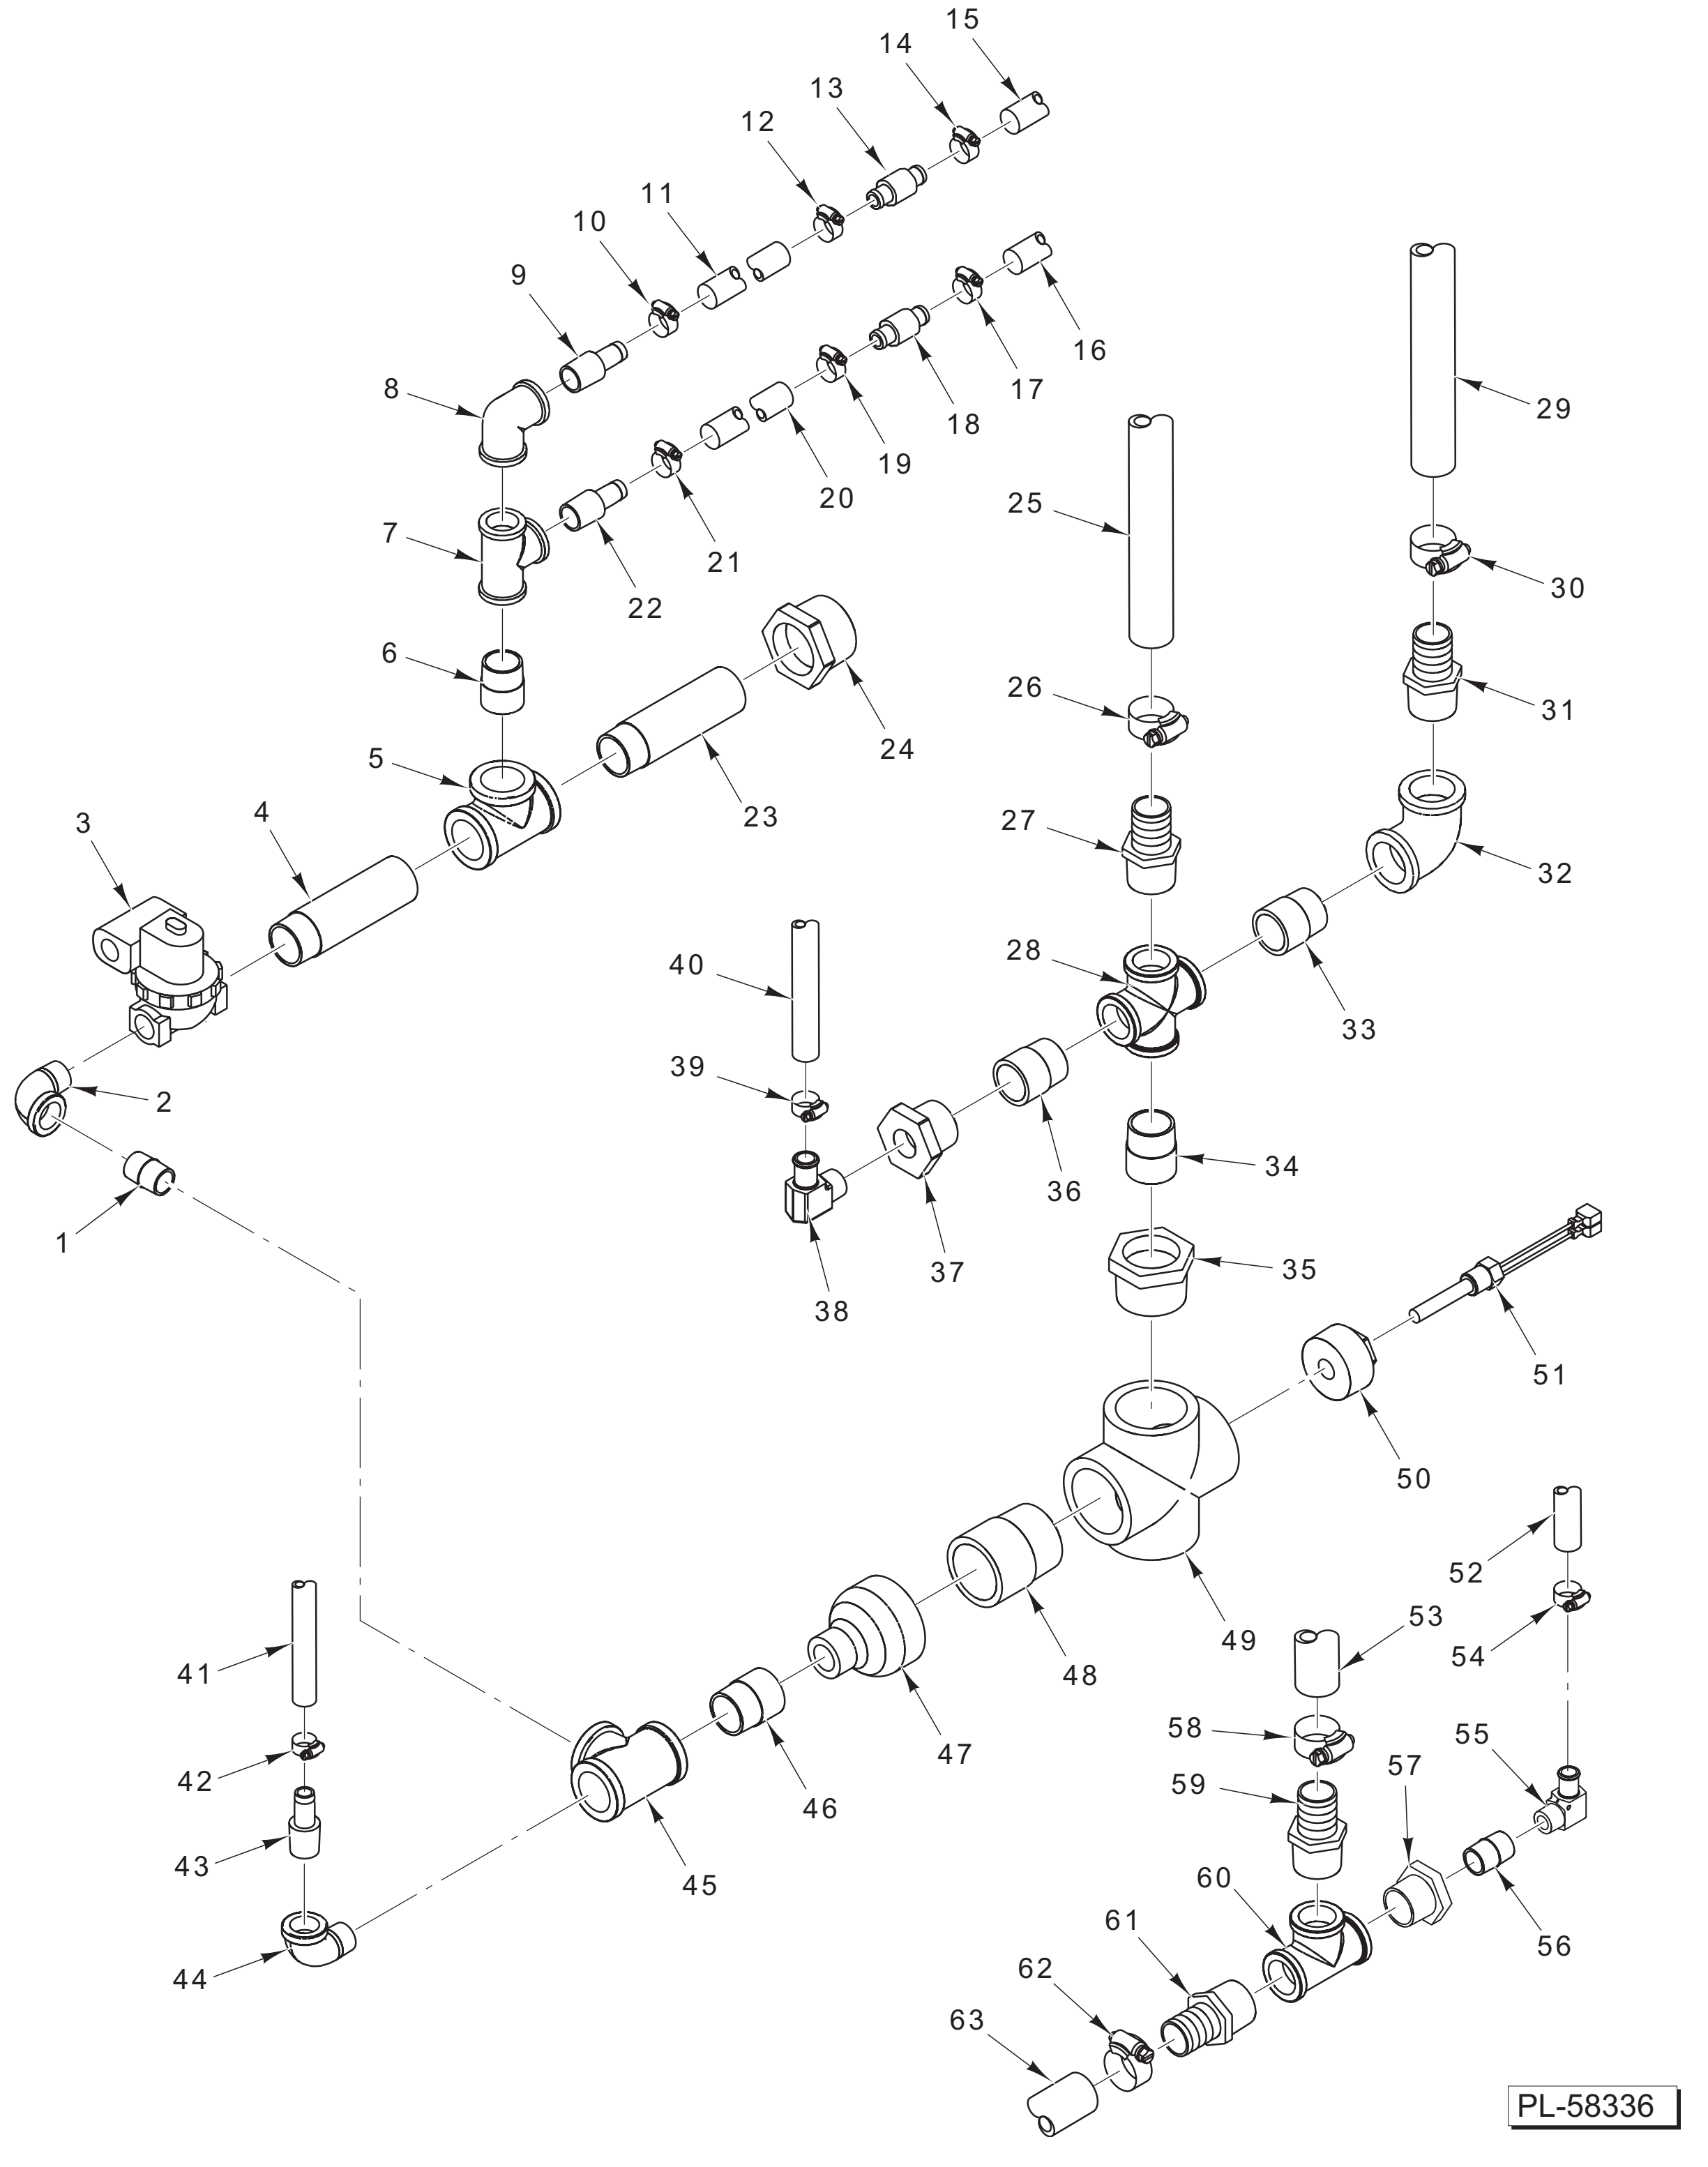

DRAIN ASSEMBLY (CURRENT CONSTRUCTION)

DRAIN ASSEMBLY (CURRENT CONSTRUCTION)

ILLUS. PL-58336	PART NO.	NAME OF PART	AMT.
1	FP-035-91	Pipe $^1/_2$ x 1$^1/_4$ TBE	1
2	FP-013-17	Elbow – Pipe $^1/_2$ x 90 Deg.	1
3	00-435968-00001	Valve – Solenoid ($^1/_2$ In.)	1
4	FP-040-62	Pipe $^1/_2$ x 3 TBE (Brass)	1
5	FP-019-21	Tee – Pipe $^1/_2$ x $^1/_2$ x $^1/_2$	1
6	FP-040-42	Pipe $^1/_2$ x 1$^1/_4$ TBE (Brass)	1
7	FP-019-21	Tee – Pipe $^1/_2$ x $^1/_2$ x $^1/_2$	1
8	FP-015-17	Elbow – Pipe $^1/_2$ x 90 Deg. (Brass)	1
9	FP-090-77	Fitting – Hose $^5/_8$ (Brass)	1
10	00-557756	Clamp	3
11	00-557681	Hose $^1/_2$ Clear	AR
12	00-557756	Clamp	3
13	00-857179-00001	Valve – Check	2
14	00-557756	Clamp	3
15	00-557681	Hose $^1/_2$ Clear	AR
16	00-557681	Hose $^1/_2$ Clear	AR
17	00-557756	Clamp	3
18	00-857179-00001	Valve – Check	2
19	00-557756	Clamp	3
20	00-557681	Hose $^1/_2$ Clear	AR
21	00-557756	Clamp	3
22	FP-090-77	Fitting – Hose $^5/_8$ (Brass)	1
23	FP-040-62	Pipe $^1/_2$ x 3 TBE (Brass)	1
24	FP-027-22	Bushing – Pipe $^3/_4$ to $^1/_2$ (Brass)	1
25	00-557477	Hose (1 In.) Green	AR
26	00-557756	Clamp – Hose	1
27	FP-090-19	Fitting – Hose 1 In.	1
28	FP-088-56	Cross – Pipe STD 1 x 1 x 1 x 1	1
29	00-557477	Hose (1 In.) Green	AR
30	00-557756	Clamp – Hose	1
31	FP-090-19	Fitting – Hose 1 In.	1
32	FP-013-27	Elbow – Pipe 1 x 90 Deg.	1
33	FP-036-17	Pipe 1 x 1$^1/_2$ TBE	1
34	FP-036-17	Pipe 1 x 1$^1/_2$ TBE	1
35	FP-026-68	Bushing – Pipe 1$^1/_2$ to 1	1
36	FP-036-37	Pipe 1$^1/_2$ x 2$^1/_2$ TBE	1
37	FP-026-24	Bushing – Pipe 1 to $^1/_2$	1
38	FP-090-54	Fitting – Hose $^5/_8$ (Brass)	1
39	00-557756	Clamp – Hose	1
40	00-557475	Hose $^5/_8$ Blue	AR
41	00-557681	Hose $^1/_2$ (Clear Braided)	AR
42	00-557756	Clamp – Hose	1
43	FP-090-77	Fitting – Hose $^5/_8$ (Brass)	1
44	FP-013-17	Elbow – Pipe $^1/_2$ x 90 Deg.	1
45	FP-019-21	Tee – Pipe $^1/_2$ x $^1/_2$ x $^1/_2$	1
46	FP-035-94	Pipe $^1/_2$ x 1$^1/_2$ TBE	1
47	FP-024-50	Coupling – Reducing 1$^1/_2$ to $^1/_2$	1
48	FP-036-17	Pipe 1 x 1$^1/_2$ TBE	1
49	FP-090-28	Cross – Pipe STD 1$^1/_2$ x 1$^1/_2$ x 1$^1/_2$ x 1$^1/_2$	1
50	FP-090-38	Bushing – Pipe 1$^1/_2$ to $^3/_8$	1
51	00-855607-00001	Thermostat – Condenser (135 Deg. F.)	1
52	00-557681	Hose $^1/_2$ Clear	AR
53	00-557477	Hose (1 In.) Green	AR
54	00-557756	Clamp	3
55	FP-090-91	Fitting – Hose $^1/_2$ (Brass)	1
56	00-857072-00001	Nozzle – Cavity Drain Cooling	1
57	FP-026-23	Bushing – Pipe 1 to $^3/_8$	1
58	00-557756	Clamp – Hose	1
59	FP-090-19	Fitting – Hose 1 In.	1
60	FP-019-38	Tee – Pipe 1 x 1 x 1	1
61	FP-090-19	Fitting – Hose 1 to 1	1
62	00-557756	Clamp – Hose	1
63	00-557477	Hose (1 In.) Green	AR

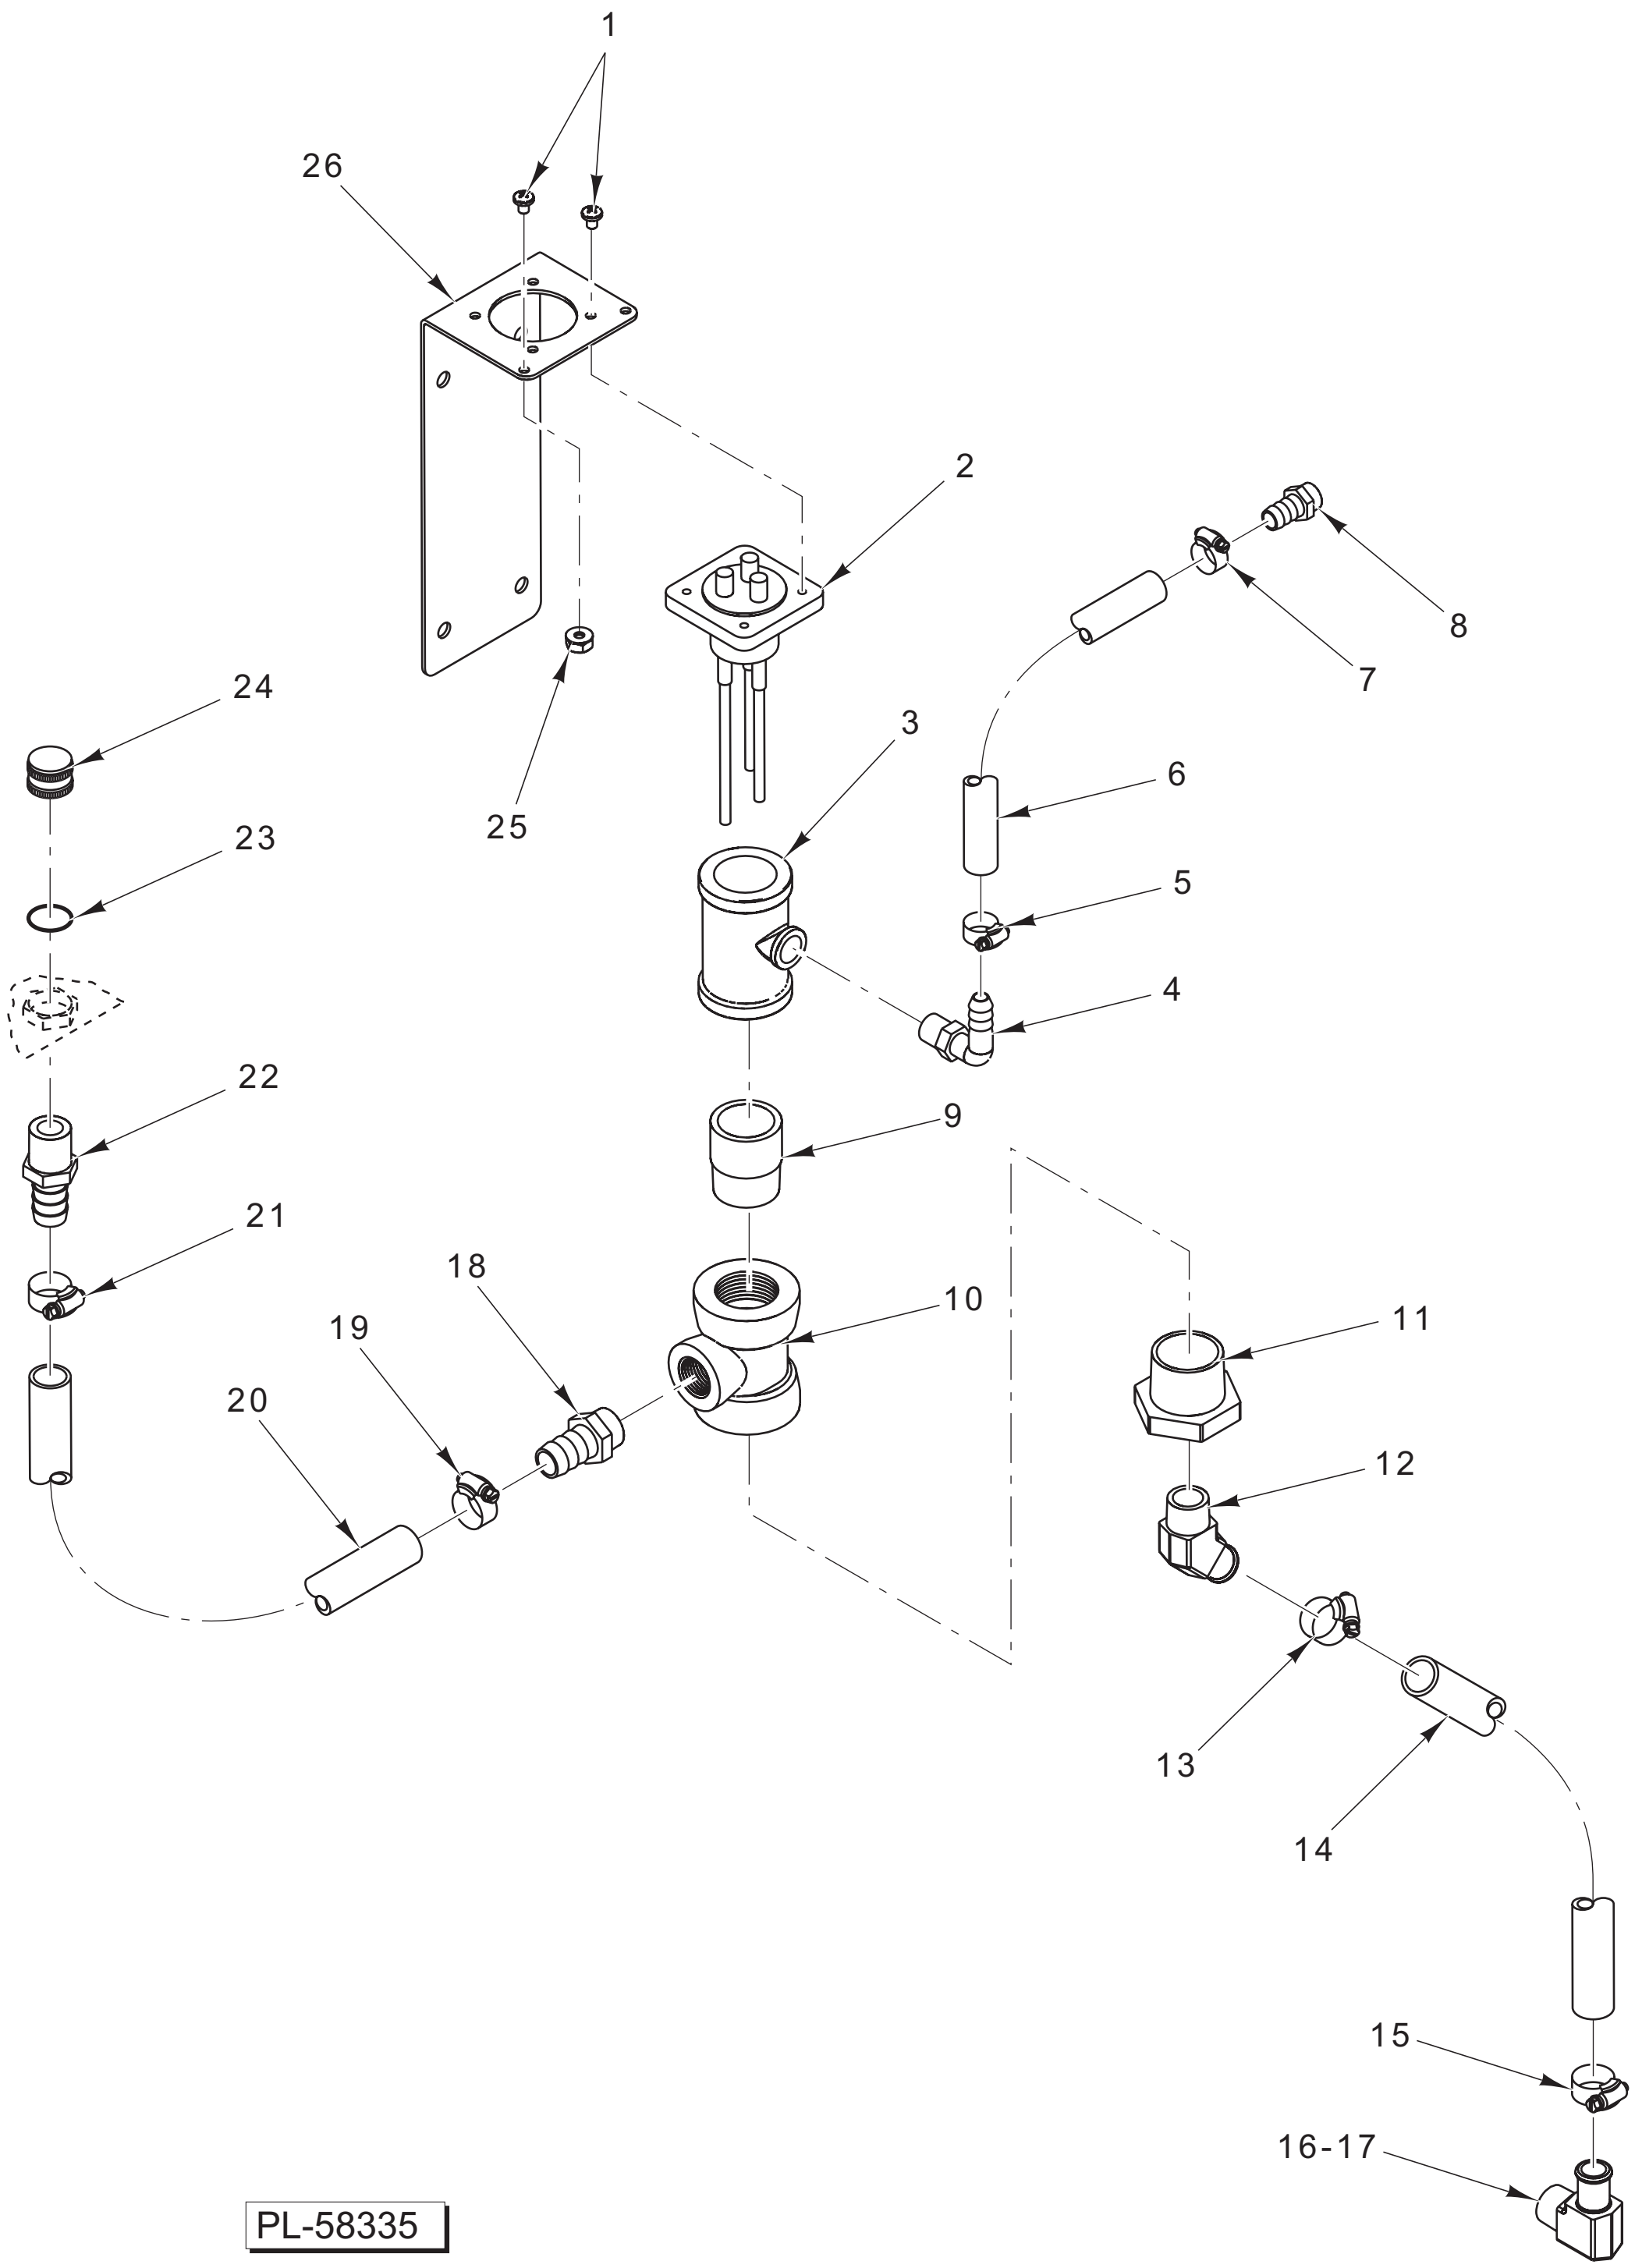


WATER LEVEL PROBE

WATER LEVEL PROBE

ILLUS. PL-58335	PART NO.	NAME OF PART	AMT.
1	SC-110-87	Mach. Screw 10-32 x 1/4 Phil. Pan Hd.	5
2	00-850736-00002	Probe – Level 3 Controller	1
3	FP-019-37	Tee – Pipe 1 x 1 x 1/4	1
4	FP-090-74	Fitting – Hose 5/8 x 45 Deg. Elbow (Brass)	1
5	00-557718	Clamp – Hose	1
6	00-557600	Hose 3/8 Clear	8 In.
7	00-557718	Clamp – Hose	1
8	FP-090-63	Fitting – Hose 5/8 to 3/8 MPT	1
9	FP-036-17	Pipe 1 x 1 1/2 TBE	1
10	FP-090-50	Tee – Pipe 1 x 1/2 x 1	1
11	FP-026-24	Bushing – Pipe 1 to 1/2	1
12	FP-090-18	Fitting – Hose 3/8 to 1/4 Elbow (Brass)	1
13	00-557718	Clamp – Hose	1
14	00-557475	Hose 5/8 Blue	4.5 In.
15	00-557718	Clamp – Hose	1
*16	FP-090-68	Fitting – Hose 5/8 90 Deg. Elbow (Brass)	1
**17	FP-090-54	Fitting – Hose 5/8 90 Deg. Elbow (Brass)	1
18	FP-087-39	Fitting – Hose 5/8 Hose to 1/2 NPT (Brass)	1
19	00-557718	Clamp – Hose	1
20	00-557475	Hose 5/8 Blue	15 In.
21	00-557718	Clamp – Hose	1
22	FP-019-37	Tee – Pipe 1 x 1 x 1/4	1
23	OR-001-10	O-Ring	1
24	FP-090-60	Fitting – Hose Cap (Brass)	1
25	NS-046-88	Nut Assy.	1
26	00-855699-00001	Bracket – Level Probe	1
	00-855679-00001	Probe – Level (Incls. Items 1 thru 4, 9 thru 12, 18, 25, & 26)	1


* Used On Machines Built On & Before S/N 27-1151339 and will need Delime Port Kit #00-857014-00001 installed.
** Used On Machines Built On & After S/N 27-1151340.

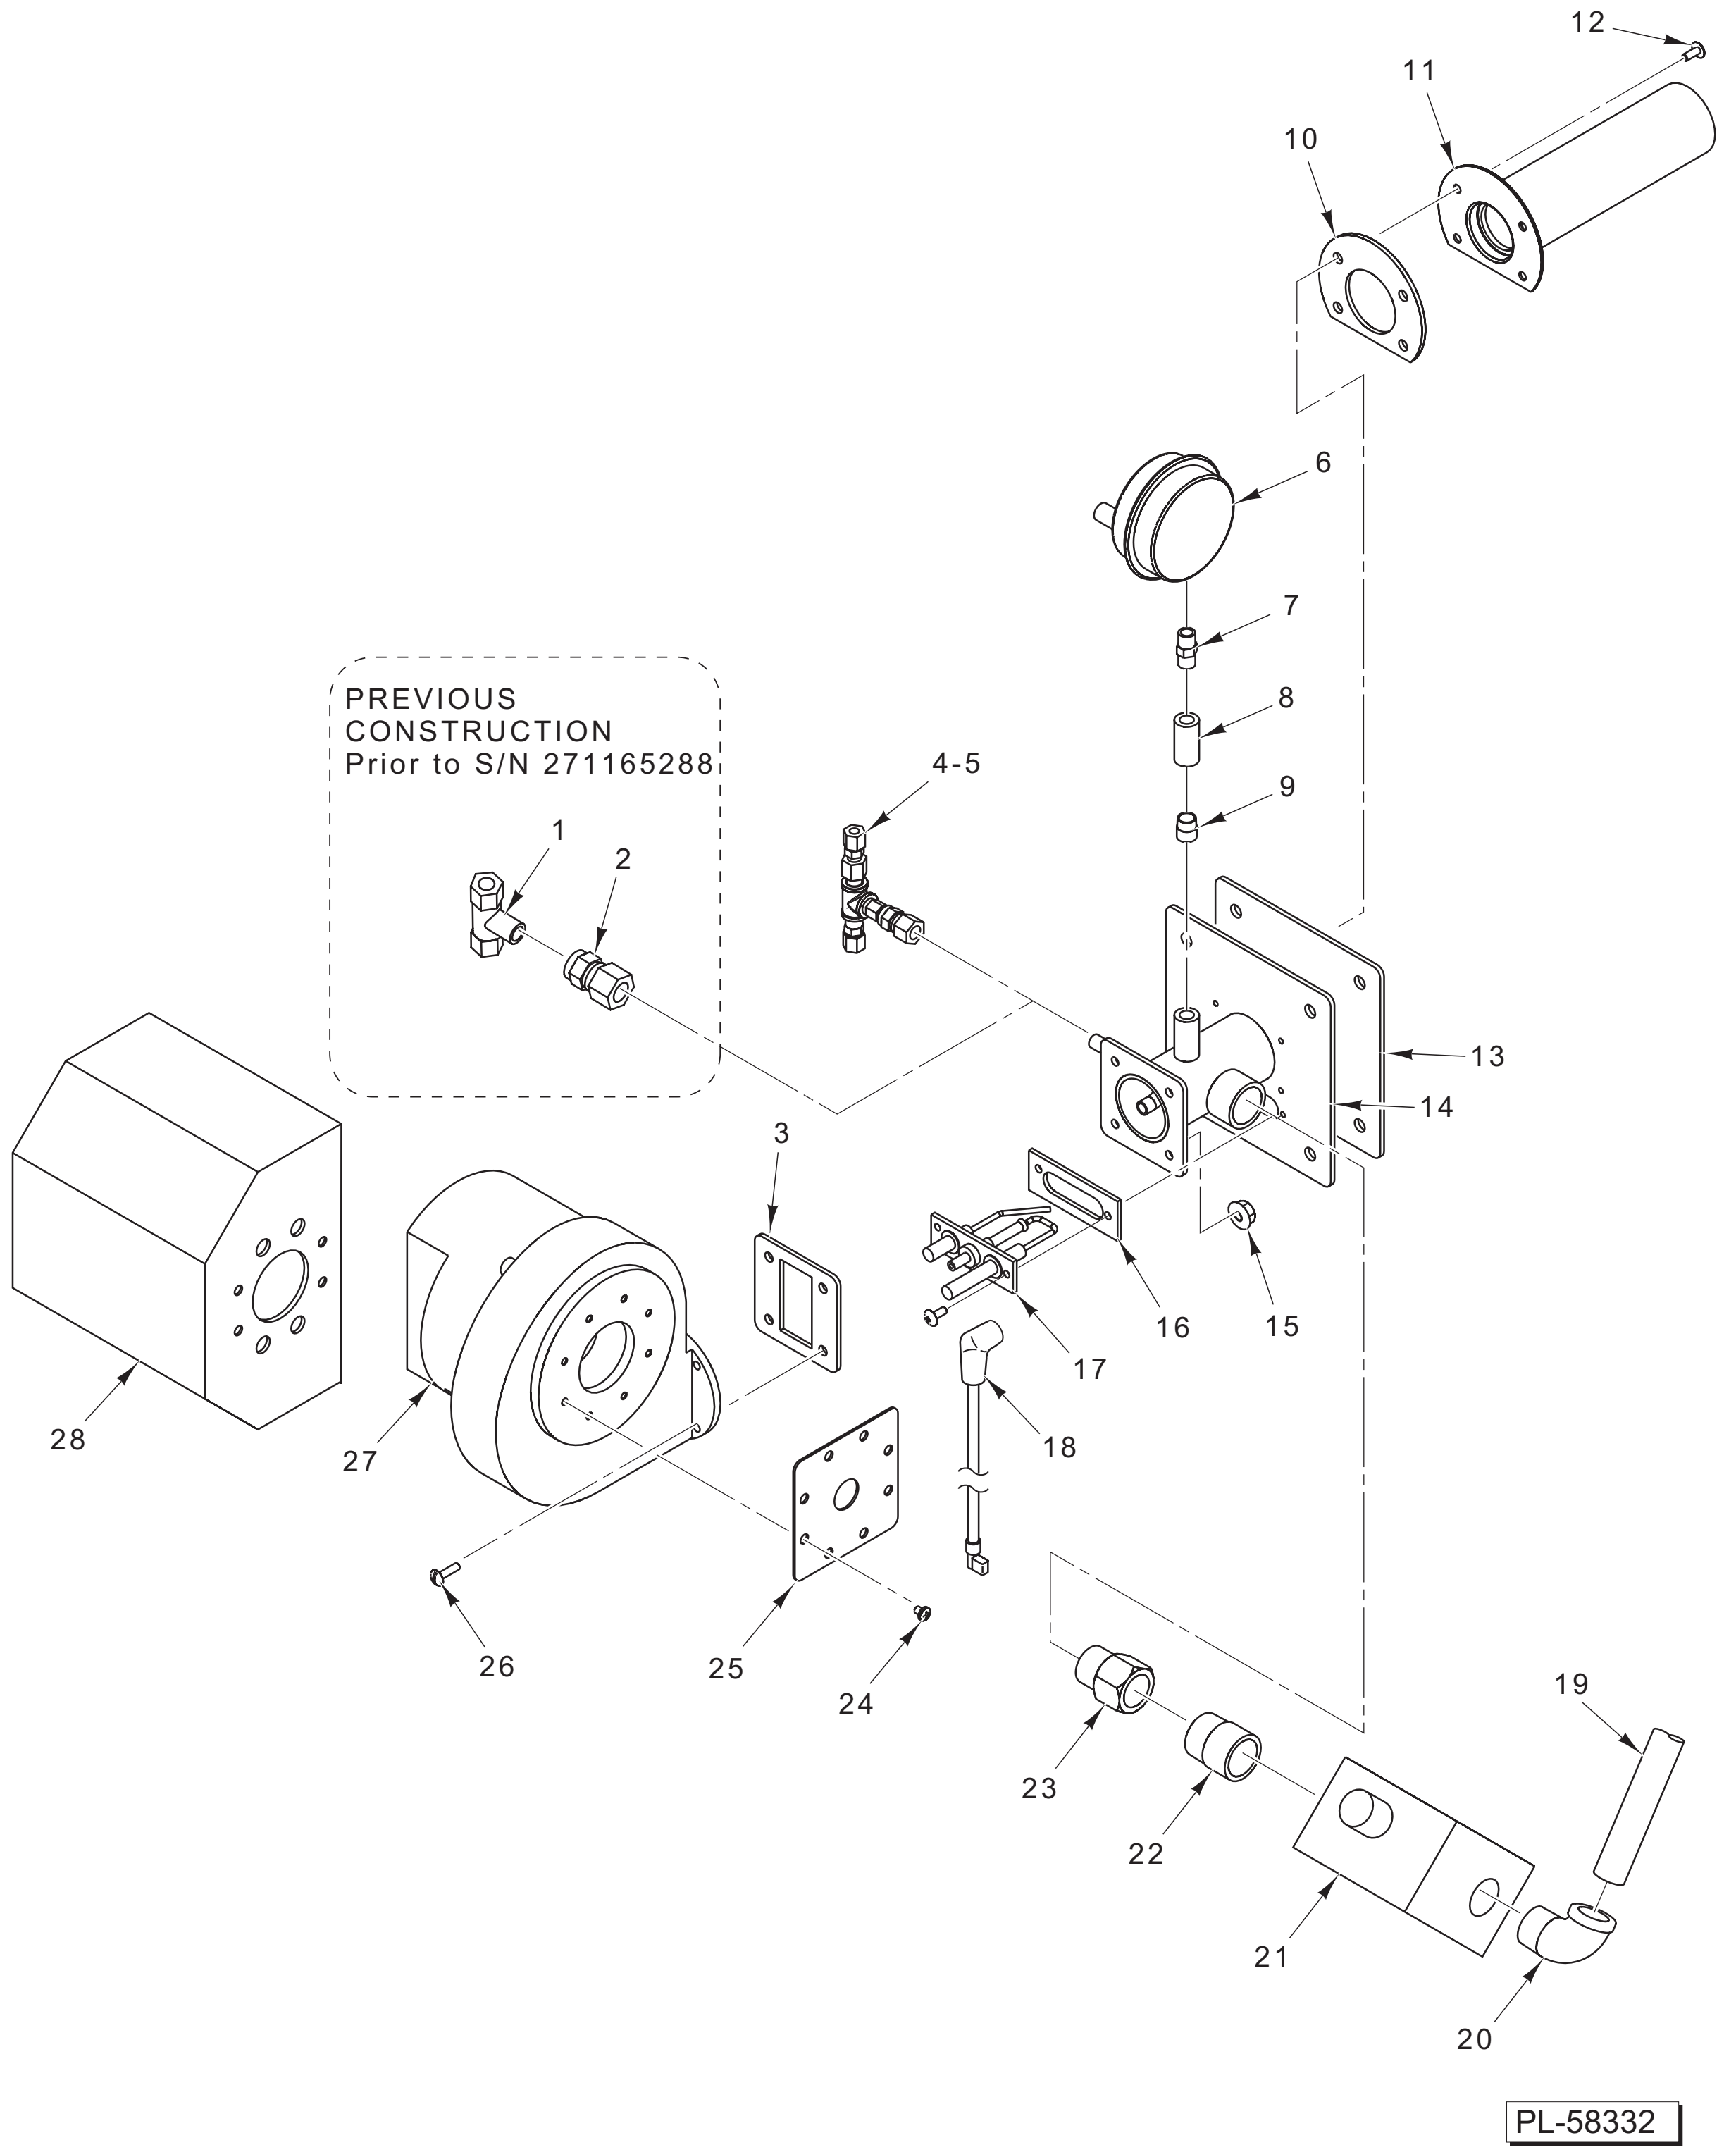

BURNER ASSEMBLY

BURNER ASSEMBLY


ILLUS. PL-58332	PART NO.	NAME OF PART	AMT.
1	FP-090-34	Fitting – Male Branch Tee (Brass) (Previous Construction)	1
2	FP-087-85	Fitting – Tube 3/8 (Brass) (Previous Construction)	1
3	00-855649-00001	Gasket – Blower	1
4	00-855601-00001	Pilot – Natural Air Assy.	1
5	00-855601-00002	Pilot – Propane Air Assy.	1
6	00-850778-00001	Switch – Air Pressure	1
7	00-851833-00001	Orifice – Air	1
8	FP-090-08	Coupling – Pipe 1/8 TBE (SST)	1
9	FP-081-93	Pipe 1/8 x 3/4 TBE (Brass)	1
10	00-855626-00001	Gasket – Burner	1
11	00-855646-00001	Burner – Aconit	1
12	SC-066-06	Mach. Screw 10-24 x 1/2 Phil. Truss Hd. (SST)	6
13	00-855625-00001	Gasket – Burner Plate	1
14	00-855640-00001	Burner – Adaptor Weld	1
15	NS-038-13	Lock Nut 10-24	4
16	00-855628-00001	Gasket – Pilot	1
17	00-855627-00001	Pilot	1
18	00-857210-00005	Cable – Ignitor Assy. (30 In.)	1
19	00-851318-00001	Flex Gas Line	1
20	FP-078-86	Elbow – Pipe 3/4 x 90 Deg.	1
21	00-844133-00001	Valve – Comb. Nat. 3 1/2 In.	1
22	FP-036-02	Pipe 3/4 x 2 1/2 TBE	1
23	00-852984-00012	Orifice	1
24	SC-110-87	Mach. Screw 10-32 x 1/4 Phil. Pan Hd.	4
25	00-855647-00001	Orifice – Air	1
26	SC-053-03	Mach. Screw 10-24 x 3/4 Slotted Truss Hd.	4
27	00-855605-00001	Blower – Variable Speed	1
28	00-855657-00001	Blower – Shroud	1

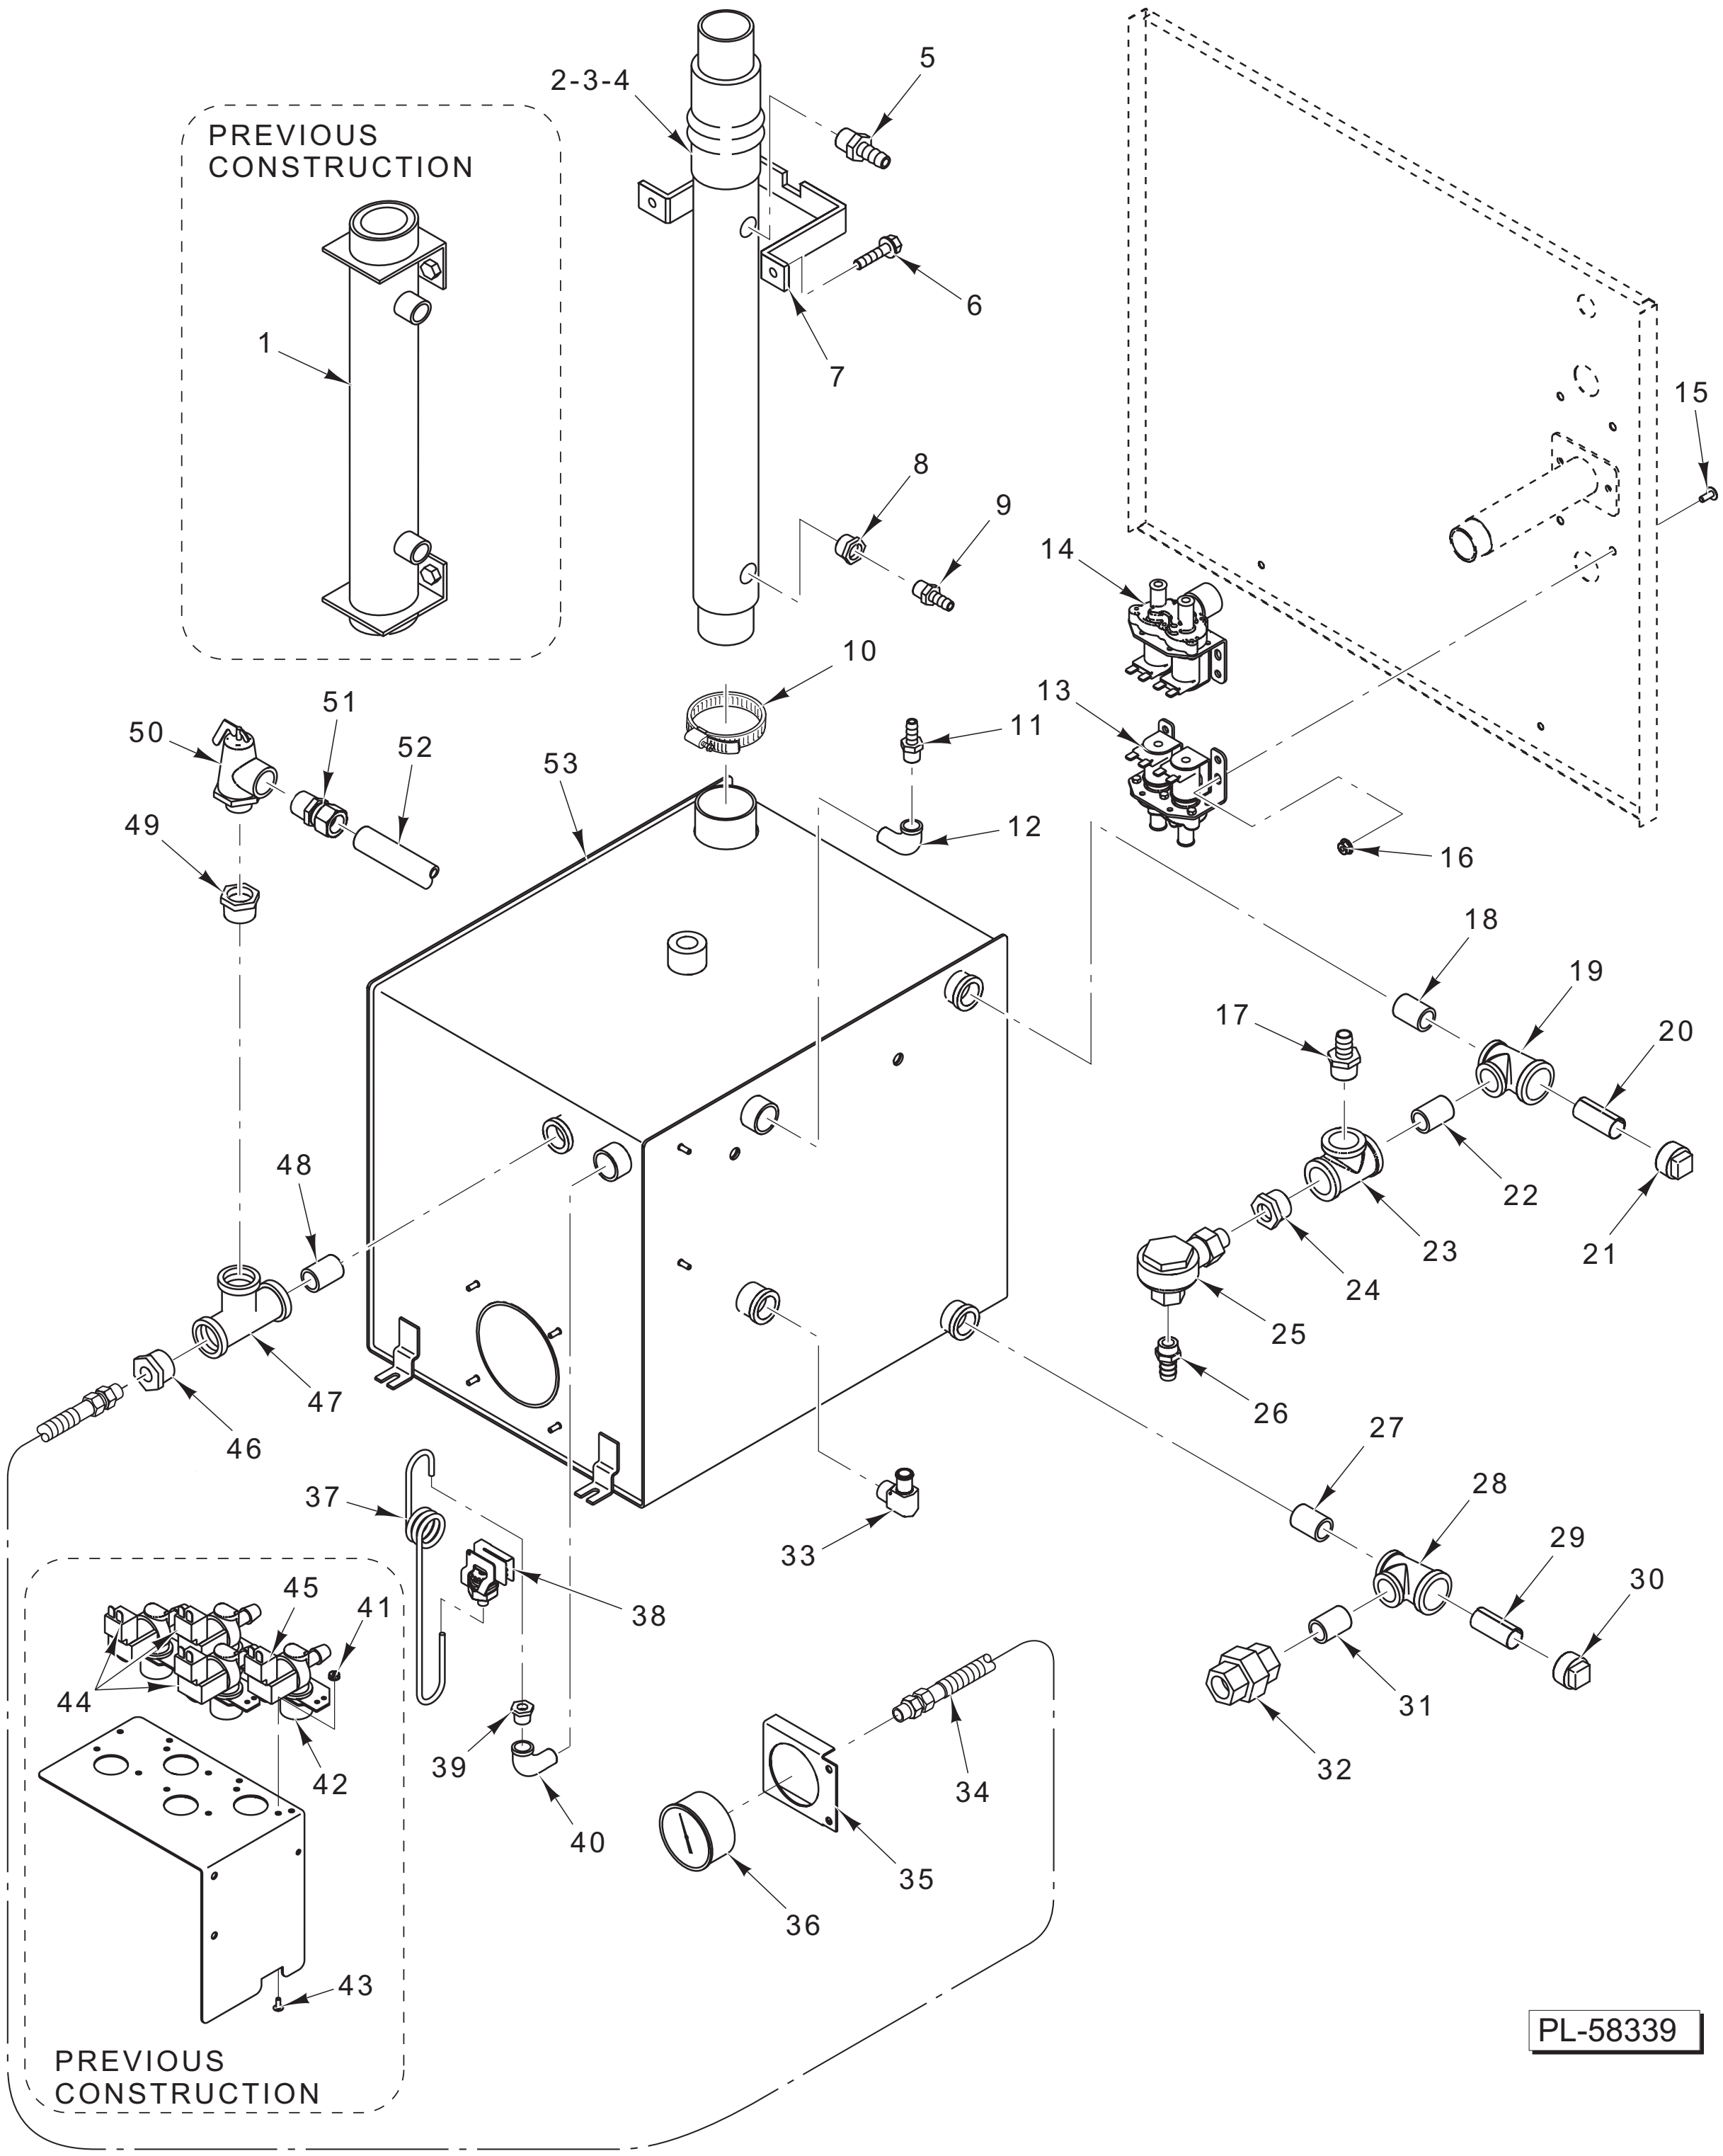

GAS GENERATOR TANK ASSEMBLY

GAS GENERATOR TANK ASSEMBLY

ILLUS. PL-58339	PART NO.	NAME OF PART	AMT.
1	00-857230-00001	Kit – Superheater Replacement (Incls. Items 2, 4, 6, & 7) (Prior to Serial #271164552)	1
2	00-857180-00002	Heater – Super Steam (Incls. Items 3, 5, 8, & 10) (After Serial #271164552)	1
3	FP-084-96	Coupling – Pipe 3/4	2
4	00-557792	Hose 3/4 x 15 1/2	1
5	FP-090-31	Fitting – Hose 5/8 to 3/4	1
6	SD-034-21	Self-Tapping Screw 10-16 x 1/2 Slotted Hex Hd.	2
7	00-857184-00001	Bracket – Superheater Support	1
8	FP-027-22	Bushing – Pipe 3/4 to 1/2 (Brass)	1
9	FP-090-83	Fitting – Hose 3/4 to 1/2 (Brass)	1
10	00-557789	Clamp – Hose	2
11	FP-090-30	Fitting – Hose 3/8 to 3/8 NPT (Brass)	1
12	FP-015-10	Elbow – Pipe 3/8 90 Deg. (Brass)	1
13	00-856720-00001	Valve – Dual Water (0.25 GPM / 3.8 GPM) Generator Fast & Slow Fill	1
14	00-856720-00003	Valve – Dual Water (3.8 GPM) Drain Cooling & Cavity Cold Water Condensate	1
15	SC-066-06	Mach. Screw 10-24 x 1/2 Phil. Truss Hd. (SST)	8
16	NS-038-13	Lock Nut 10-24	6
17	FP-090-31	Fitting – Hose 5/8 to 3/4 NPT (Brass)	1
18	FP-041-50	Pipe 3/4 x 1 3/8 TBE (Brass)	1
19	FP-019-40	Tee – Pipe 1 x 3/4 x 3/4 (Brass)	1
20	00-855676-00001	Screen – Strainer	1
21	FP-028-22	Plug – Pipe (1 In.)	1
22	FP-041-66	Pipe 3/4 x 3 TBE (Brass)	1
23	FP-019-28	Tee – Pipe 3/4 x 3/4 x 3/4 (Brass)	1
24	FP-027-22	Bushing – Pipe 3/4 to 1/2 (Brass)	1
25	00-880016-00011	Trap – Radiator 1/2 In.	1
26	FP-087-39	Fitting – Hose 5/8 to 3/8 NPT (Brass)	1
27	FP-041-50	Pipe 3/4 x 1 3/8 TBE (Brass)	1
28	FP-019-40	Tee – Pipe 1 x 3/4 x 3/4 (Brass)	1
29	00-855676-00001	Screen – Strainer	1
30	FP-028-22	Plug – Pipe (1 In.)	1
31	FP-041-66	Pipe 3/4 x 3 TBE (Brass)	1
32	FP-022-18	Union – Pipe 3/4 (Brass)	1
33	FP-090-54	Fitting – Hose 5/8 x 1/2 NPT (Brass)	1
34	00-426505-00018	Tube – Flex 1/4 x 18 In.	2
35	00-881057	Bracket – Pressure Gauge	1
36	00-833152	Gauge – Pressure	1
37	00-857178	Coil – Condensate	1
38	00-857022-00001	Switch – Pressure	1
39	FP-027-04	Bushing – Pipe 3/8 to 1/8 (Brass)	1
40	FP-015-10	Elbow – Pipe 3/8 x 90 Deg. (Brass)	1
41	NS-046-89	Nut Assy. 6-32 (Previous Construction)	8
42	FP-090-32	Fitting – Hose (Brass)	4
43	SC-066-02	Mach. Screw 6-32 x 3/8 Phil. Truss Hd. (Previous Construction)	8
44	00-855373-00002	Valve – Fill (3.7 GPM) (Previous Construction)	3
45	00-855373-00001	Valve – Fill (0.25 GPM) (Previous Construction)	1
46	FP-027-15	Bushing – Pipe 3/4 to 1/4 (Brass)	1
47	FP-019-28	Tee – Pipe 3/4 x 3/4 x 3/4 (Brass)	1
48	FP-041-50	Pipe 3/4 x 1 3/8 TBE (Brass)	1
49	FP-027-15	Bushing – Pipe 3/4 to 1/4 (Brass)	1
50	00-855606-00001	Valve – Relief 3/4 In. 5 PSI	1
51	FP-012-22	Fitting –Tube 3/4 TBG x 3/4 NPT (Brass)	1
52	00-857208-00001	Tube – Pop Off Discharge	1
53	00-855610-00001	Generator – Steam Weldment	1
	FP-028-34	Plug – Pipe (2 In.)	1
	00-851614-00004	Tube – Flex 3/8 x 24 In.	1
	00-557681	Hose – Water Supply 1/2 x 1/8 (Clear PVC) (Current Construction)	AR
	00-557599	Hose – Water Supply 3/8 x 1/8 (Clear PVC) (Previous Construction)	AR

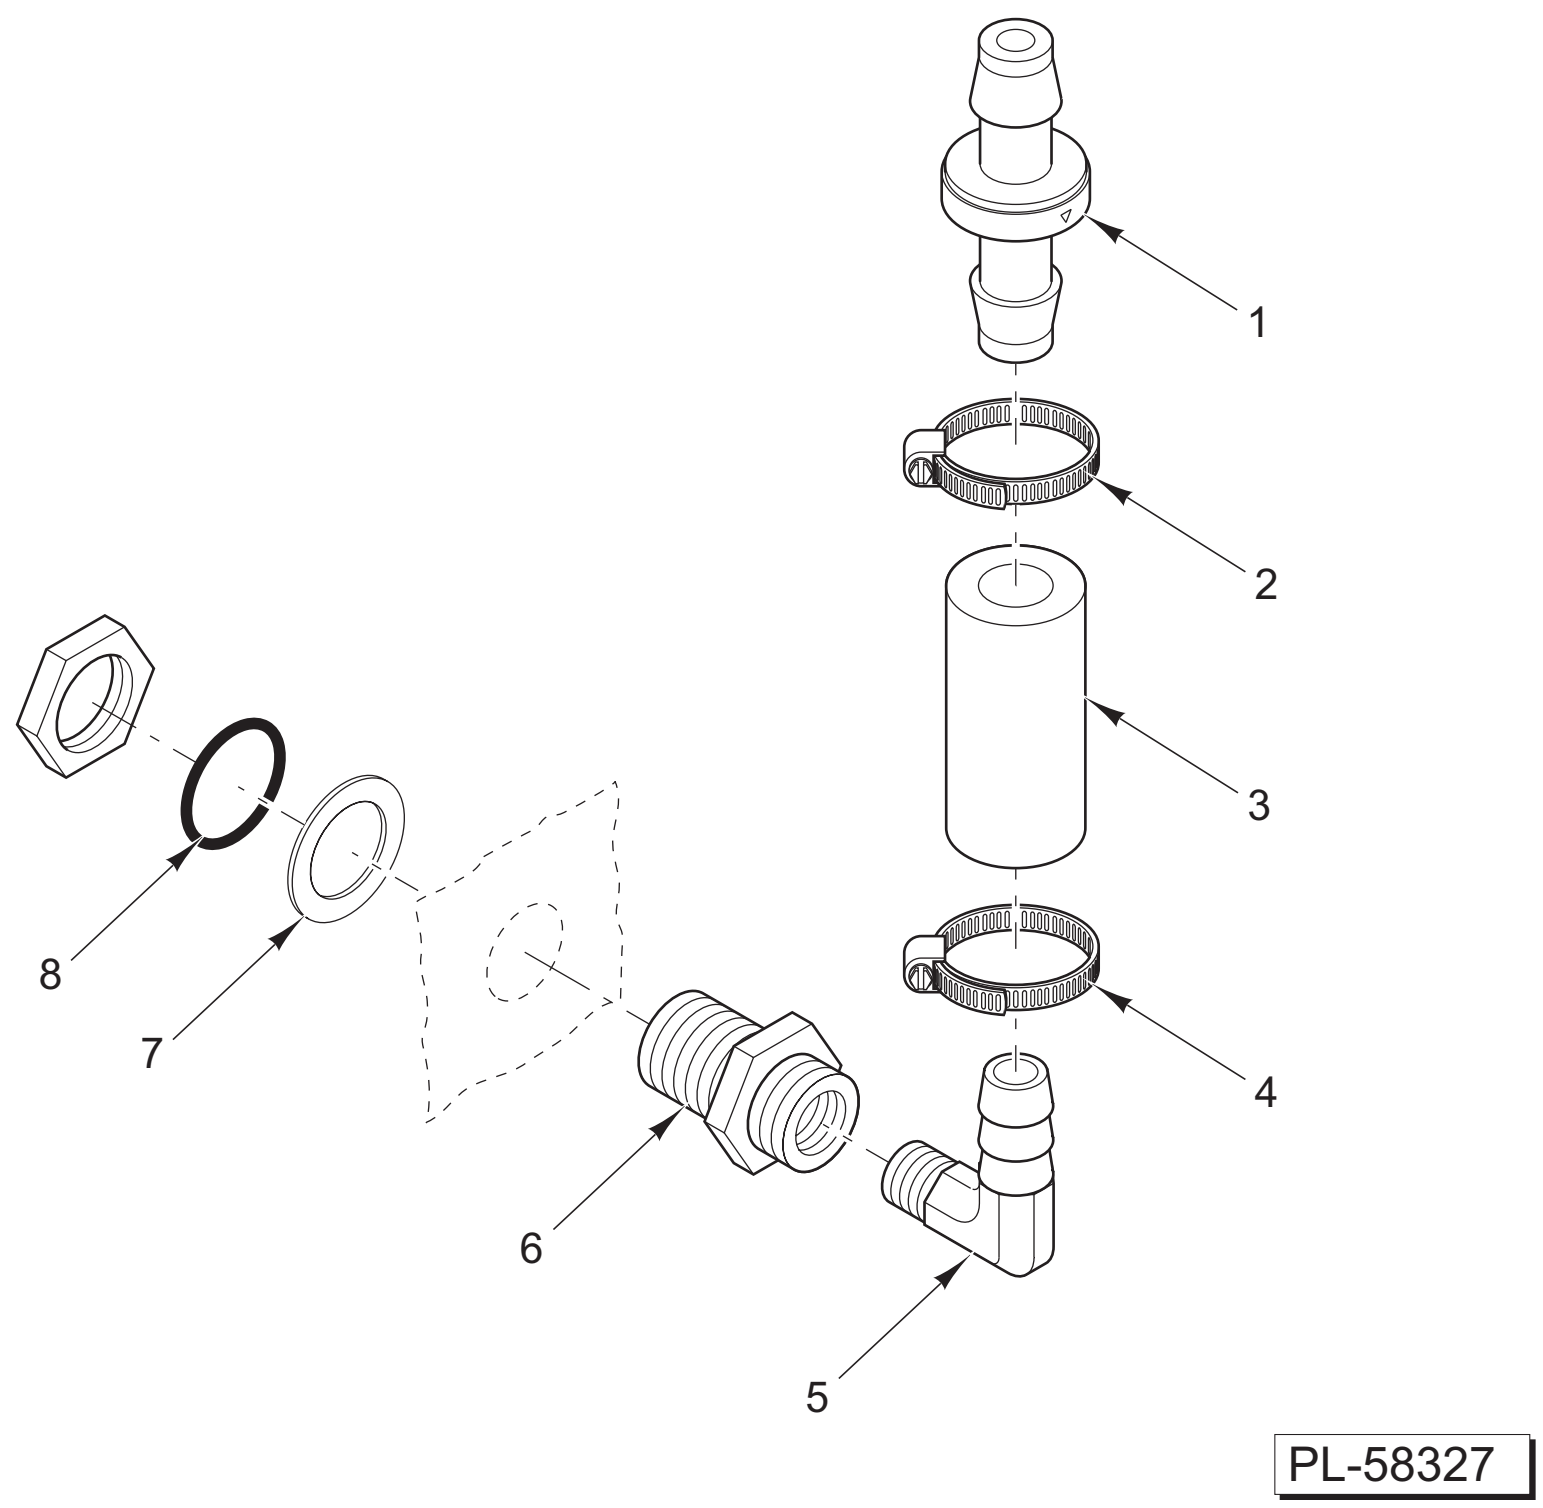

COMPARTMENT VACUUM BREAKER

COMPARTMENT VACUUM BREAKER

ILLUS. PL-58327	PART NO.	NAME OF PART	AMT.
1	00-856755-00001	Valve – Check	1
2	00-557718	Clamp – Hose	1
3	00-557473	Tube Line – Compartment Vacuum	1
4	00-557718	Clamp – Hose	2
5	FP-090-71	Fitting – Hose $^3/_8$ Hose by $^1/_8$ NPT (Brass)	1
6	FP-090-36	Coupling – Anchor $^1/_8$ (Brass) (Incls. Nuts)	1
7	WS-010-26	Washer	1
8	00-856769-00001	O-Ring	1